


TFM-110W STA-110

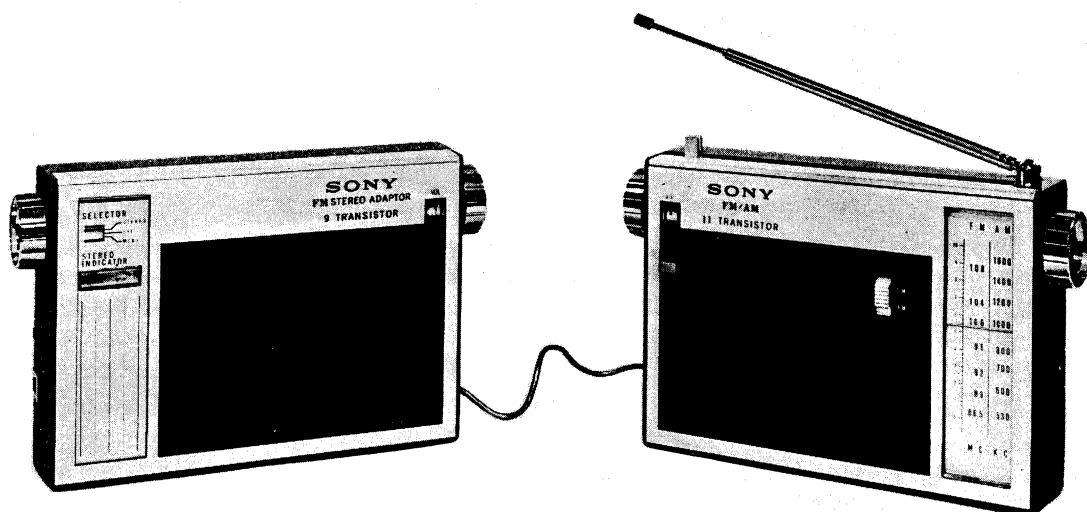

Specifications for TFM-110W


Circuit :	11 Transistor Superheterodyne
Frequency Coverage :	FM 86.5 ~ 108 Mc (3.53 ~ 2.78 m) AM 530 ~ 1,605 Kc (566 ~ 187 m)
Antenna System :	FM Built-in Telescopic Antenna AM Built-in Ferrite Bar Antenna
Intermediate Frequency :	FM 10.7 Mc AM 455 Kc
Maximum Sensitivity :	FM 4 dB (1.5 μ V/m) (at 50 mW output) AM 27 dB (22 μ V/m)
Selectivity :	AM 28 dB at 10 Kc off resonance, at 1,400 Kc
Output Power :	300 mW (undistorted) 500 mW (maximum)
Current Drain :	21mA at zero signal, 160 mA at 300 mW output
Speaker :	4" $\times$ 2-1/2" (10 $\times$ 6.5 cm) PM Dynamic, 8 Ω
Power Source :	Three Size "C" Flashlight Batteries (4.5 Volts in total), or House Current by using SONY AC Power Adapter
Dimensions :	7-1/8" $\times$ 5-3/16" $\times$ 1-7/8" (180 $\times$ 131 $\times$ 47.5 mm)
Weight :	2.1 lbs. (0.95 Kg)
Color :	Gray, Beige

SONY®

SERVICE MANUAL


TFM-110W

Block Diagram

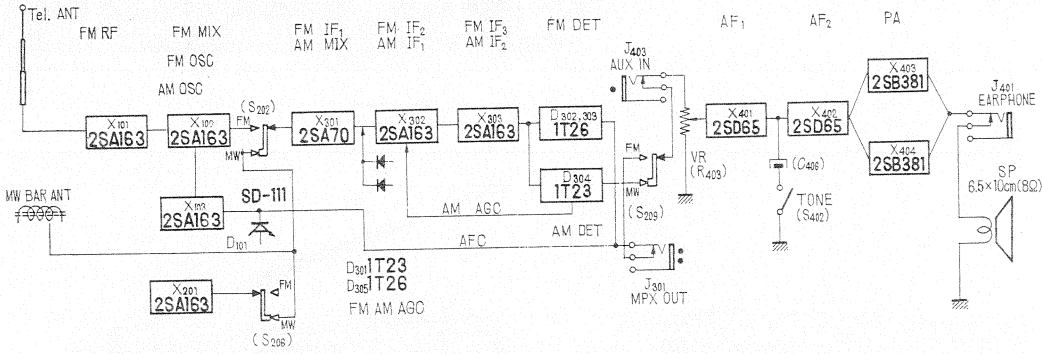


(Fig. 1)

Major Parts Location

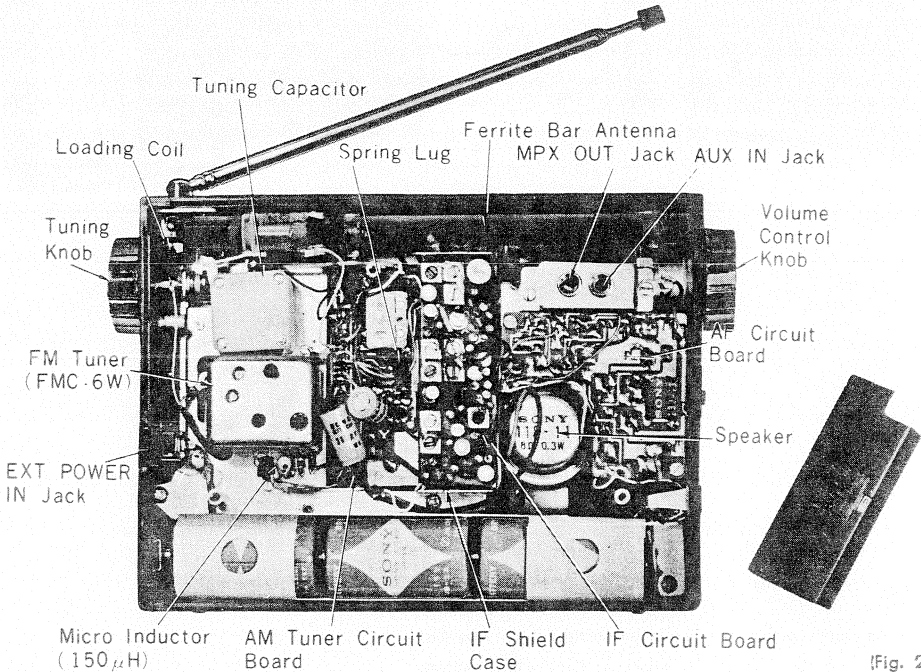

(Fig. 2)

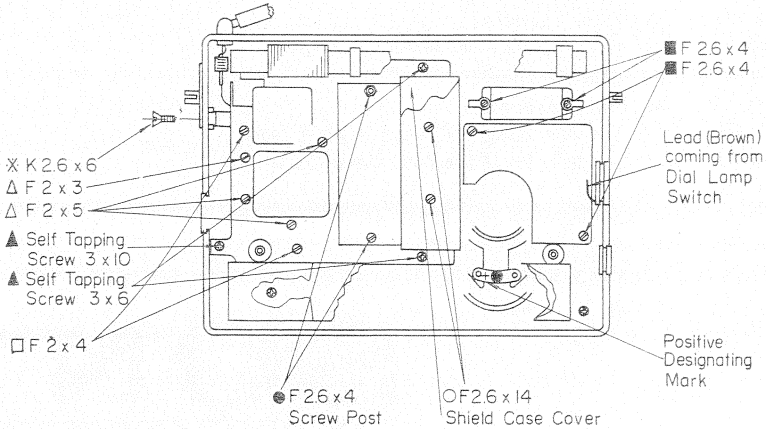

(Fig. 3)

Removal of Chassis

- (1) Remove the three Back Cover Holding Screws ($\oplus$ RK 2.6 $\times$ 4) to remove the Back Cover.
- (2) Take out all the Batteries.
- (3) Remove a Battery Cylinder Holding Screw.
- (4) Unsolder the FM Loading Coil at the Telescopic Antenna Terminal.
- (5) Unsolder the following wires.
 - a) Three wires (two black and a red) on the AF Circuit Board coming from the IF Circuit Board.
 - b) A black wire at the Battery Positive Contact Plate.
- (6) Remove the Volume Control Knob and the Tuning Knob by pulling straight out.
- (7) Pull out the two black tip from the Bar Antenna Holders.
- (8) Remove the Ferrite Bar at the right side of the Bar Antenna Holders.
- (9) Remove the three screws marked with $\blacktriangle$ in Fig. 3.


Note: Take care that the screws, A and B in Fig. 3, are different in length. So never fail to use the specified screws to the original positions in re-assembling the Chassis.
- (10) Remove a screw (K 2.6 $\times$ 6) marked with $\otimes$ in Fig. 3.
- (11) Remove the EXT POWER IN Jack from the Cabinet by pulling straight out.
- (12) Take out the Chassis from the Cabinet gently taking care not to cut the leads.

Removal of AF Circuit Board

- (1) Unsolder the three leads (a red, a yellow and a black) going to the Volume Control.
- (2) Unsolder the two leads (a brown and a black) going to the Multi-Jack.
- (3) Remove the four screws marked with $\blacksquare$ in Fig. 3.
- (4) Unsolder the lead (brown) at the AF Circuit Board coming from the Dial Lamp Switch.
- (5) Remove the AF Circuit Board from the Cabinet gently taking care not to cut the leads.

Removal of IF Circuit Board

- (1) Remove the IF Shield Case Cover.
 - (2) Remove the two Screws marked with $\bigcirc$ in Fig. 3.
 - (3) Attach tentatively the IF Shield Case to the Chassis with the two Screws removed by preceding step (2).
 - (4) The IF Circuit Board can be repaired by raising it gently as shown in Fig. 4.
- ☆ If it is necessary to separate the IF Circuit Board completely from the Cabinet, unsolder all the leads going from it to other points, and it can now be removed.

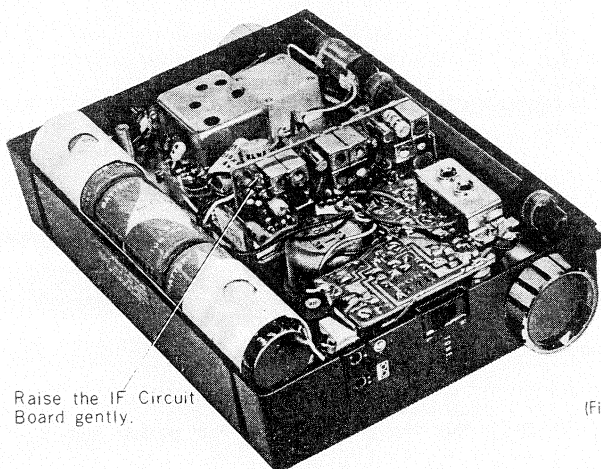

(Fig. 4)

Removal AM Tuner Circuit Board


- (1) Remove the Chassis as outlined under "Removal of Chassis".
- (2) Remove the IF Circuit Board from the Chassis.
- (3) Remove the screw and the screw post marked with ● in Fig. 3.
- (4) Remove the AM Tuner Circuit Board from the Chassis gently taking care not to cut the leads.

Removal of AM Tuning Capacitor

- (1) Remove the Chassis as outlined under "Removal of Chassis".
- (2) Set the Pointer to the upper end by turning the Tuning Knob. (near the 1,600 Kc)
- (3) Remove the Dial Cord from the Pointer.
- (4) Unscrew the two screws marked with □ in Fig. 3 and remove the Dial Scale from the Chassis.
- (5) Pull out the Tuning Gear for AM from the Tuning Capacitor and remove the two AM Tuning Capacitor Holding Screws.

To String the Dial Cord

String the Dial Cord in the order of figures, ①, ②, ③, ④ and ⑤, as shown below while keeping the cut portion of the Tuning Drum faces toward the right upper.

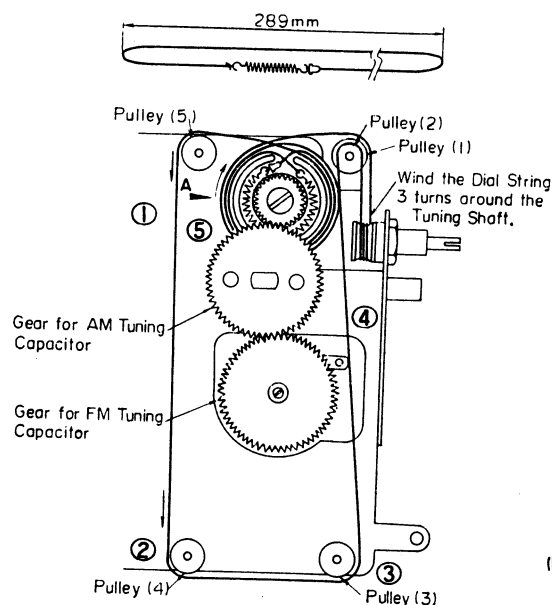

(Fig. 5)

Adjustment of each Gear

- (1) Rotate the tuning drum to the extreme clockwise position.
- (2) Rotate the tuning drum 1-1/4 turns counter-clockwise from the position set by preceding step (1), so that the cut portion of the drum faces toward position marked with "A" in Fig. 5.
- (3) Rotate the gear for the FM tuning capacitor to the extreme clockwise position.
- (4) Rotate the gear for the AM tuning capacitor to the extreme counter-clockwise position.
- (5) Adjust the position of each gear so that the gears may engage each other with perfect operation.

Frequency Coverage and Tracking Adjustment**MW Band****Preparation for Adjustments**

- ☆ Receiver to be Adjusted
 - Power Source Voltage : Keep 4.5 Volts during the adjustments.
 - Volume Control setting : Maximum
 - Tone Switch setting : High
 - Band Switch setting : AM
- ☆ Load for Output : Connect 8Ω resistor instead of speaker.
- ☆ Output Meter : Connect across the load resistor 8Ω .
(VTVM can be used also.)
- ☆ Signal Source : Use SSG (Standard Signal Generator) which can deliver RF signals modulated at 30% with 1,000 c/s.
- ☆ Radiating Antenna : Use loop type.

Frequency Coverage Adjustment


- (1) Deliver a 520 Kc signal from the SSG.
- (2) Set the Tuning Capacitor at the maximum capacitance position by turning the Tuning Knob of the Receiver counter-clockwise.
- (3) Adjust the core of the MW OSC Coil (L_{202}) to tune to the signal.
- (4) Set the Tuning Capacitor at the minimum capacitance position by turning the Tuning Knob of the Receiver clockwise.
- (5) Deliver a 1,680 Kc signal from the SSG.
- (6) Adjust the MW OSC Trimmer Capacitor (C_{204}) to tune to the signal.
- (7) Repeat the above procedures (1~6) until the frequency range between 520 Kc and 1,680 Kc is fully covered.

Tracking Adjustment

- (1) Deliver a 620 Kc signal from the SSG.
- (2) Tune to the signal by turning the Tuning Knob of the Receiver.
- (3) Adjust the position of the MW ANT Coil (L_{201}) along the Ferrite Bar to obtain the maximum output.
- (4) Deliver a 1,400 Kc signal from the SSG.
- (5) Tune to the signal by turning the Tuning Knob of the Receiver.
- (6) Adjust the MW ANT Trimmer Capacitor (C_{203}) to obtain the maximum output.
- (7) Repeat the above procedures (1~6) until the maximum output is obtained.

FM Band**Preparation for Adjustments**

- ☆ Receiver to be Adjusted
 - Power Source Voltage : Keep 4.5 Volts during the adjustments.
 - Band Switch setting : FM
 - Volume Control setting : Maximum
- ☆ Load for Output : Connect 8Ω resistor instead of Speaker.
- ☆ Output Meter : Connect across the load resistor 8Ω .
(VTVM can be used also)
- ☆ Signal Source : Use SSG (Standard Signal Generator) which can deliver RF signals modulated at 30% with 1,000 c/s.
- ☆ Dummy Antenna : Unsolder the lead at the Telescopic Antenna terminal. Connect the SSG to the telescopic antenna lead and ground of the receiver through the Dummy Antenna as shown in Fig. 6.

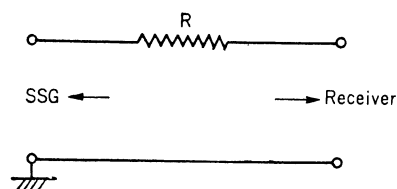

(Fig. 6)


* Nominal input impedance of the receiver is 75Ω .

* R is then calculated as follows :

$$R = 75\Omega - R_s [\Omega]$$

where R_s is output impedance of the SSG which is usually 50Ω or 75Ω .

Arrangement of Test Equipments

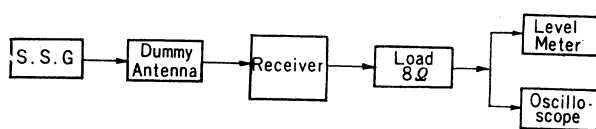

(Fig. 7)


1. Frequency Coverage Adjustment


- (1) Set the modulation of the SSG to "AM".
- (2) Deliver a 85.5 Mc signal from the SSG.
- (3) Set the Tuning Capacitor at the maximum capacitance position by turning the Tuning Knob of the Receiver counter-clockwise.
- (4) Adjust the core and gap of the FM OSC Coil (L_{104}) to tune to the signal.
- (5) Deliver a 109.5 Mc signal from the SSG.
- (6) Set the Tuning Capacitor at the minimum capacitance position by turning the Tuning Knob of the Receiver clockwise.
- (7) Adjust the FM OSC Trimmer Capacitor (C_{102-2}) to tune to the signal.
- (8) Repeat the above procedures (2-7) until the frequency range between 85.5 Mc and 109.5 Mc is fully covered.

2. Tracking Adjustment

- (1) Set the modulation of the SSG to "AM".
- (2) Deliver a 86 Mc signal from the SSG.
- (3) Tune to the signal correctly by turning the Tuning Knob of the Receiver.
- (4) Change the modulation of the SSG to "FM".
- (5) Adjust the FM RF Coil (L_{102}) for the maximum reading on the Output Meter.
- (6) Change the modulation of the SSG to "AM".
- (7) Deliver a 109 Mc signal from the SSG.
- (8) Tune to the signal correctly by turning the Tuning Knob of the Receiver.
- (9) Change the modulation of the SSG to "FM".
- (10) Adjust the FM RF Trimmer Capacitor (C_{102-1}) to obtain the maximum output.
- (11) Repeat the above procedures (1-10) until the maximum output is obtained.

Wiring View

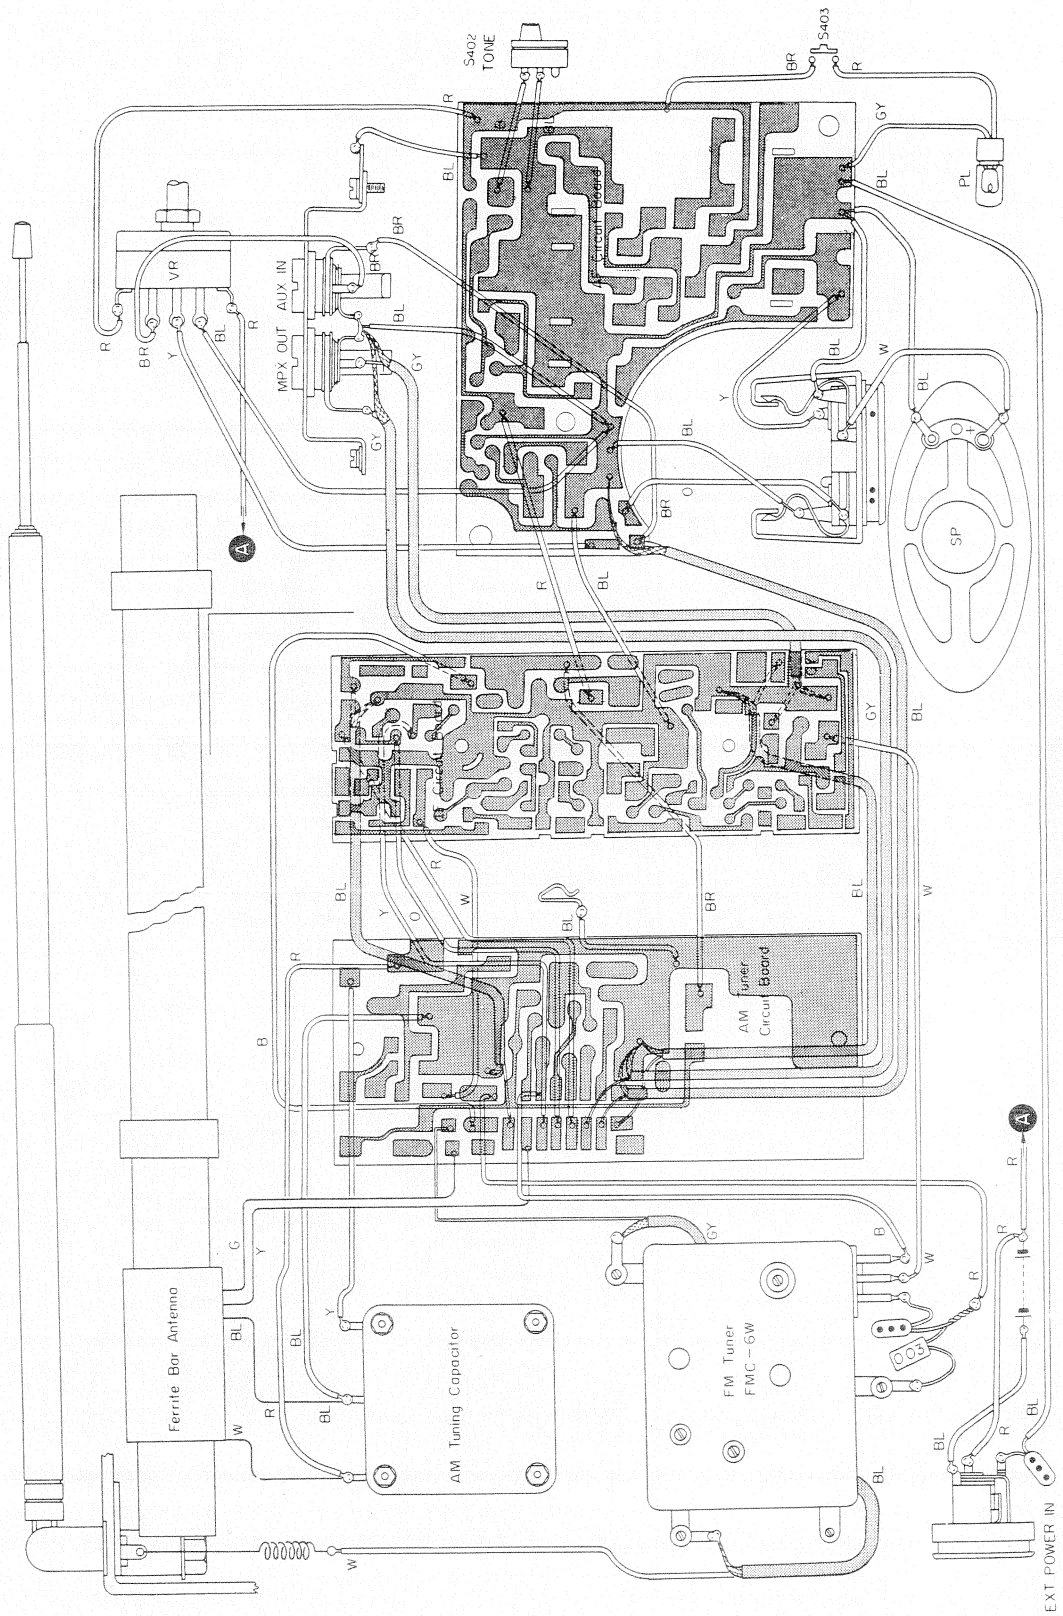

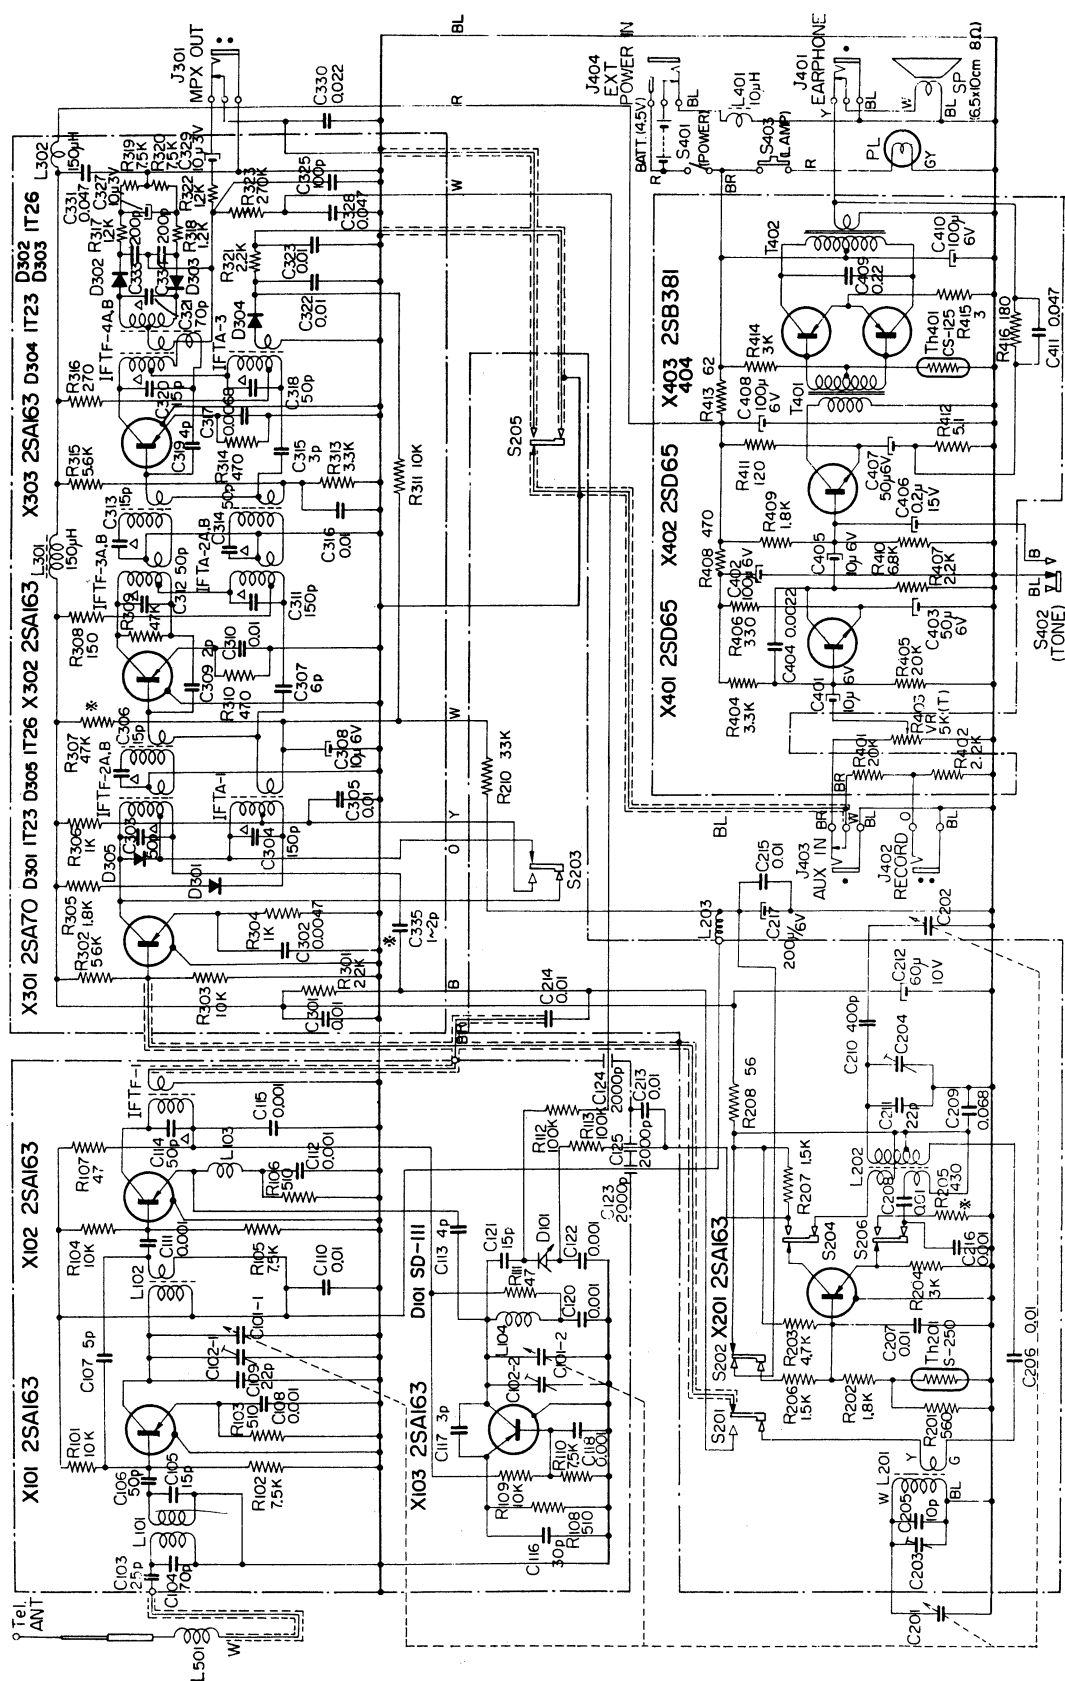

% To be adjusted

Position of the band switch (S201~206) in the Diagram shows

MW side.

Capacitors marked with "Δ" are built in relative IF Transformers.

The schematic diagram illustrates the receiver section of a radio, organized into several stages labeled X101 through X404. The components and their values are as follows:


- Stage X101:** Includes resistors R101 (1.37M), R102 (0.7V), R103 (510), R104 (47), R105 (510), R106 (510), R107 (47), R108 (510), R109 (47), R110 (510), R111 (47), and R112 (510). It also features a 3V source and a 1.37mA current source.
- Stage X102:** Includes resistors R101 (1.37M), R102 (0.7V), R103 (510), R104 (47), R105 (510), R106 (510), R107 (47), R108 (510), R109 (47), R110 (510), R111 (47), and R112 (510). It also features a 3V source and a 1.37mA current source.
- Stage X103:** Includes resistors R101 (1.37M), R102 (0.7V), R103 (510), R104 (47), R105 (510), R106 (510), R107 (47), R108 (510), R109 (47), R110 (510), R111 (47), and R112 (510). It also features a 3V source and a 1.37mA current source.
- Stage X201:** Includes resistors R201 (1.5K), R202 (1.5K), R203 (1.5K), R204 (1.5K), R205 (1.5K), R206 (1.5K), R207 (1.5K), R208 (1.5K), R209 (1.5K), R210 (1.5K), R211 (1.5K), and R212 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X301:** Includes resistors R301 (1.5K), R302 (1.5K), R303 (1.5K), R304 (1.5K), R305 (1.5K), R306 (1.5K), R307 (1.5K), R308 (1.5K), R309 (1.5K), R310 (1.5K), R311 (1.5K), and R312 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X302:** Includes resistors R301 (1.5K), R302 (1.5K), R303 (1.5K), R304 (1.5K), R305 (1.5K), R306 (1.5K), R307 (1.5K), R308 (1.5K), R309 (1.5K), R310 (1.5K), R311 (1.5K), and R312 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X303:** Includes resistors R301 (1.5K), R302 (1.5K), R303 (1.5K), R304 (1.5K), R305 (1.5K), R306 (1.5K), R307 (1.5K), R308 (1.5K), R309 (1.5K), R310 (1.5K), R311 (1.5K), and R312 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X401:** Includes resistors R401 (1.5K), R402 (1.5K), R403 (1.5K), R404 (1.5K), R405 (1.5K), R406 (1.5K), R407 (1.5K), R408 (1.5K), R409 (1.5K), R410 (1.5K), R411 (1.5K), and R412 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X402:** Includes resistors R401 (1.5K), R402 (1.5K), R403 (1.5K), R404 (1.5K), R405 (1.5K), R406 (1.5K), R407 (1.5K), R408 (1.5K), R409 (1.5K), R410 (1.5K), R411 (1.5K), and R412 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X403:** Includes resistors R401 (1.5K), R402 (1.5K), R403 (1.5K), R404 (1.5K), R405 (1.5K), R406 (1.5K), R407 (1.5K), R408 (1.5K), R409 (1.5K), R410 (1.5K), R411 (1.5K), and R412 (1.5K). It also features a 3V source and a 1.5mA current source.
- Stage X404:** Includes resistors R401 (1.5K), R402 (1.5K), R403 (1.5K), R404 (1.5K), R405 (1.5K), R406 (1.5K), R407 (1.5K), R408 (1.5K), R409 (1.5K), R410 (1.5K), R411 (1.5K), and R412 (1.5K). It also features a 3V source and a 1.5mA current source.

The diagram also shows a band switch (S202) and a volume control (S401). The position of the band switch in the diagram shows MW side.

Mounting Diagram

— Parts Side —


AM Tuner and IF Sections

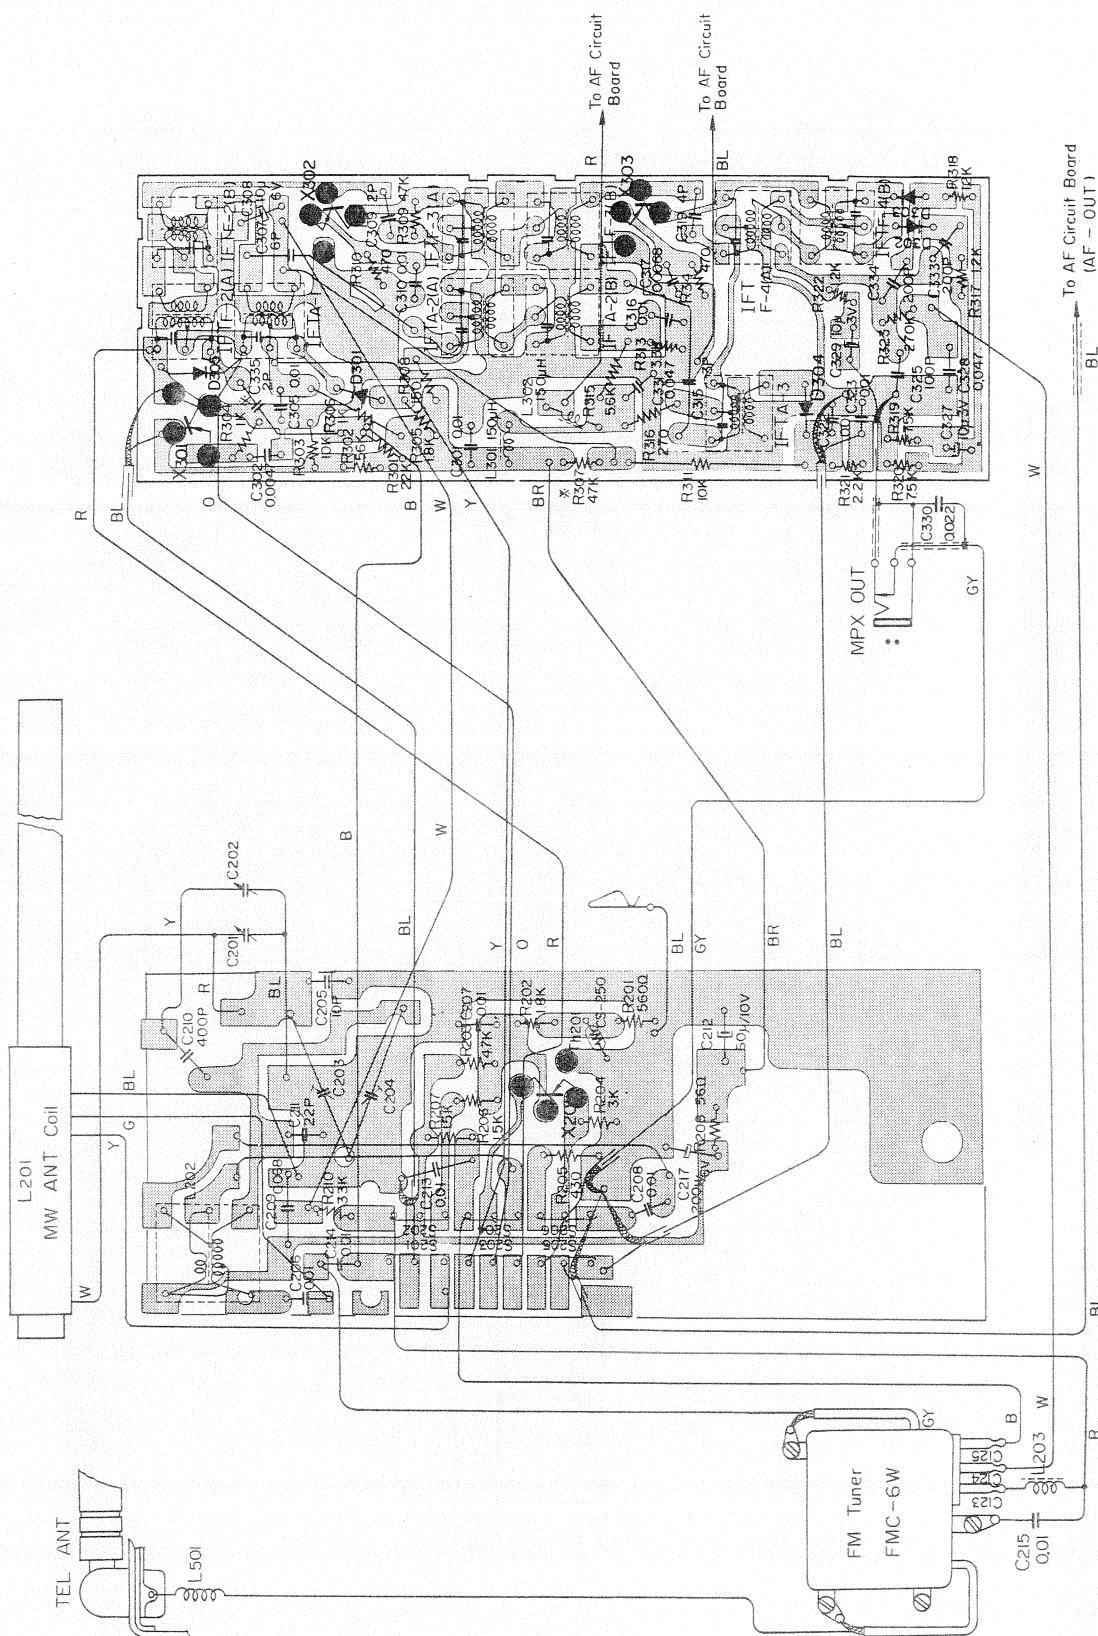


Mounting Diagram

— Parts Side —

AM Tuner Section

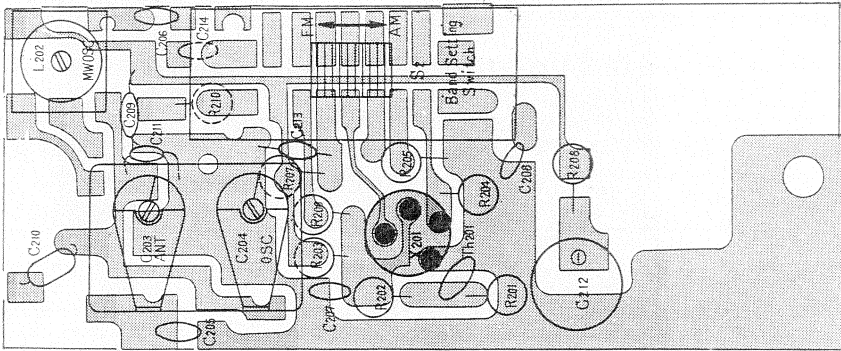


IF Section

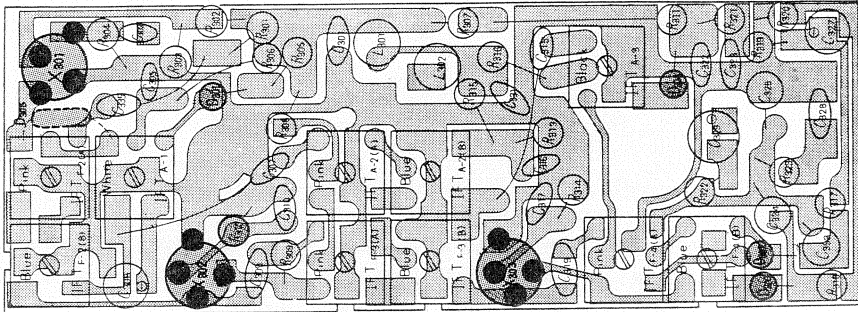

TFM-110W


Mounting Diagram

— Parts Side —
AF Section

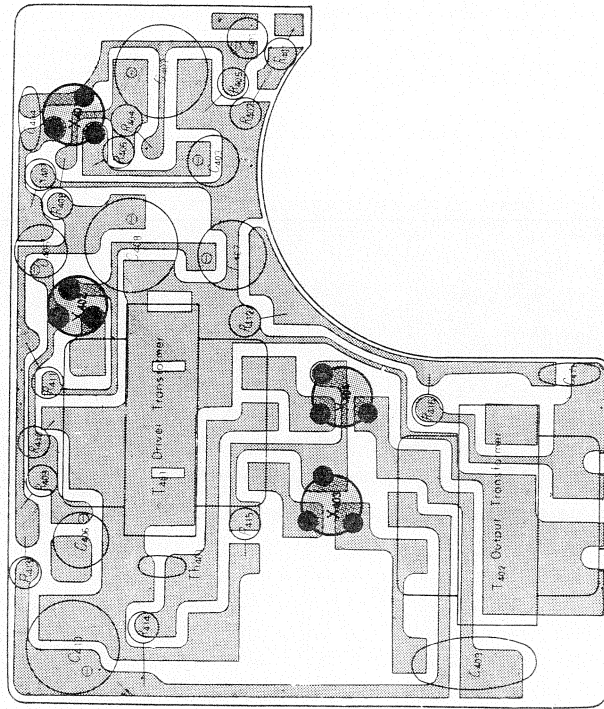

Mounting Diagram

— Printed Side —
AF Section

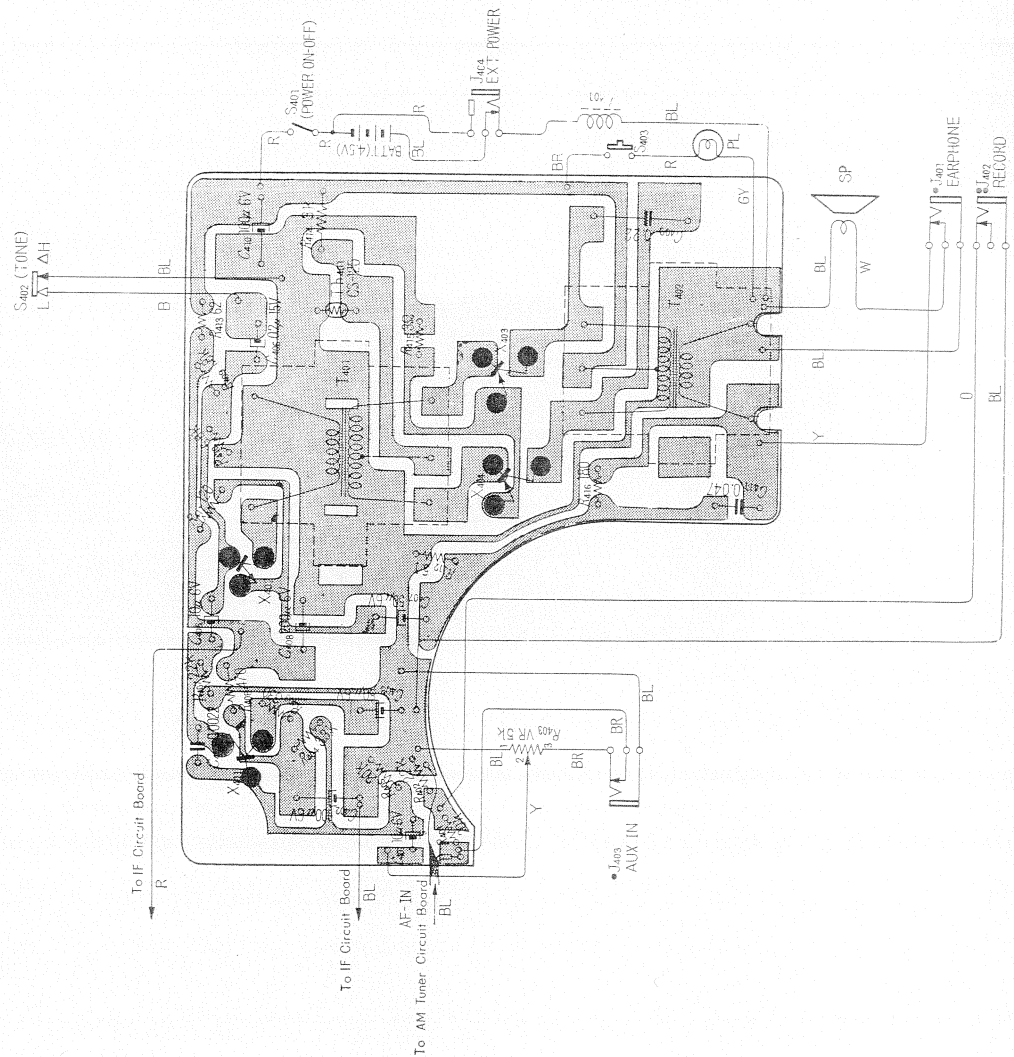

Electronic Parts List

Part No.	Symbol No.	Description	Part No.	Symbol No.	Description
1-501-051-11	Tel. ANT	Telescopic Antenna	1-208-026-11	R ₁₀₃	510 Ω $\frac{1}{10}$ W Ceramic
1-401-216-11	L ₁₀₁	FM, Antenna Coil	-057-11	R ₁₀₄	10K Ω " "
1-425-162-11	L ₁₀₂	FM, RF Coil	-054-11	R ₁₀₅	7.5K Ω " "
1-405-251-11	L ₁₀₃	Injection Coil	-026-11	R ₁₀₆	510 Ω " "
-135-11	L ₁₀₄	FM, Oscillator Coil	-105-11	R ₁₀₇	47 Ω " "
1-401-200-21	L ₂₀₁	MW, Ferrite Bar Antenna	-026-11	R ₁₀₈	510 Ω " "
1-405-110-11	L ₂₀₂	MW, Oscillator Coil	-057-11	R ₁₀₉	10K Ω " "
1-407-030-11	L ₂₀₃	Micro Inductor (150 μ H)	-054-11	R ₁₁₀	7.5K Ω " "
-030-11	L ₃₀₁	"	-105-11	R ₁₁₁	47 Ω " "
-030-11	L ₃₀₂	"	-145-11	R ₁₁₂	100K Ω " "
-037-11	L ₄₀₁	" (10 μ H)	-145-11	R ₁₁₃	100K Ω " "
1-401-219-11	L ₅₀₁	FM, Loading Coil	1-203-445-11	R ₂₀₁	560 Ω $\frac{1}{16}$ W Carbon
1-403-231-11	IFTF ₋₁	FM, Single Tuned IF Transformer	-339-11	R ₂₀₂	1.8K Ω " "
-240-11	IFTF ₋₂ (A)	FM, Double Tuned IF Transformer	-424-11	R ₂₀₃	4.7K Ω " "
-240-21	IFTF ₋₂ (B)	"	-489-11	R ₂₀₄	3K Ω " "
-240-11	IFTF ₋₃ (A)	"	-606-11	R ₂₀₅	430 Ω " "
-240-21	IFTF ₋₃ (B)	"	-422-11	R ₂₀₆	1.5K Ω " "
-241-11	IFTF ₋₄ (A)	FM, Double Tuned IF Transformer for Discriminator	-422-11	R ₂₀₇	1.5K Ω " "
-241-21	IFTF ₋₄ (B)	FM, Double Tuned IF Transformer for Discriminator	1-204-188-11	R ₂₀₈	56 Ω " "
-026-11	IFTA ₋₁	AM, Single Tuned IF Transformer		R ₂₀₉	—Deleted—
-107-11	IFTA ₋₂ (A)	AM, Double Tuned IF Transformer	1-203-634-11	R ₂₁₀	33K Ω $\frac{1}{16}$ W Carbon
-107-21	IFTA ₋₂ (B)	AM, Double Tuned IF Transformer	-429-11	R ₃₀₁	22K Ω " "
-108-11	IFTA ₋₃	AM, Single Tuned IF Transformer	-637-11	R ₃₀₂	56K Ω " "
1-423-072-11	T ₄₀₁	Driver Transformer	-427-11	R ₃₀₃	10K Ω " "
1-427-122-11	T ₄₀₂	Output Transformer	-421-11	R ₃₀₄	1.0K Ω " "
1-507-011-01	J ₃₀₁	MPX OUT Jack	-339-11	R ₃₀₅	1.8K Ω " "
-075-11	J ₄₀₁	Earphone Jack	-421-11	R ₃₀₆	1.0K Ω " "
-011-01	J ₄₀₂	Record Jack	-631-11	*R ₃₀₇	47K Ω " "
-100-11	J ₄₀₃	AUX IN Jack	-598-11	R ₃₀₈	150 Ω " "
1-513-238-11	S ₂₀₁₋₂₀₆	Band Setting Switch	-636-11	R ₃₀₉	47K Ω " "
1-514-082-12	S ₄₀₁	Power Switch (VR)	-420-11	R ₃₁₀	470 Ω " "
-114-12	S ₄₀₂	Tone Switch	-427-11	R ₃₁₁	10K Ω " "
1-502-118-11	SP	Speaker		R ₃₁₂	—Deleted—
1-518-006-02	PL	Dial Light	1-203-434-11	R ₃₁₃	3.3K Ω $\frac{1}{16}$ W Carbon
1-528-002-00	Batt.	Battery (4.5 Volts in total)	-420-11	R ₃₁₄	470 Ω " "
			-425-11	R ₃₁₅	5.6K Ω " "
			-602-11	R ₃₁₆	270 Ω " "
			-780-11	R ₃₁₇	1.2K Ω " "
			-780-11	R ₃₁₈	1.2K Ω " "
			-426-11	R ₃₁₉	7.5K Ω " "
			-426-11	R ₃₂₀	7.5K Ω " "
			-423-11	R ₃₂₁	2.2K Ω " "
			-780-11	R ₃₂₂	1.2K Ω " "
			-681-11	R ₃₂₃	270K Ω " "
			-631-11	R ₄₀₁	20K Ω " "
			-423-11	R ₄₀₂	2.2K Ω " "
			1-221-447-11	R ₄₀₃	5K Ω Volume Control
			1-203-434-11	R ₄₀₄	3.3K Ω $\frac{1}{16}$ W Carbon
			-631-11	R ₄₀₅	20K Ω " "
			-604-11	R ₄₀₆	330 Ω " "
			-423-11	R ₄₀₇	2.2K Ω " "
			-420-11	R ₄₀₈	470 Ω " "
			-339-11	R ₄₀₉	1.8K Ω " "
			-438-11	R ₄₁₀	6.8K Ω " "
			-596-11	R ₄₁₁	120 Ω " "
			-450-11	R ₄₁₂	5.1 Ω " "
			1-204-189-11	R ₄₁₃	62 Ω " "
			1-203-489-11	R ₄₁₄	3K Ω " "
			-704-11	R ₄₁₅	3 Ω $\frac{1}{8}$ W " "
			-417-11	R ₄₁₆	180 Ω $\frac{1}{16}$ W " "
					Capacitor
1-208-057-11	R ₁₀₁	10K Ω $\frac{1}{10}$ W Ceramic	1-151-088-11	C ₁₀₁	FM, Tuning Capacitor, 2 gang
-054-11	R ₁₀₂	7.5K Ω " "		C ₁₀₂	FM, Trimmer Capacitor, 2 unit

* To be adjusted

—continued—

Part No.	Symbol No.	Description	Part No.	Symbol No.	Description
1-101-090-11	C ₁₀₃	25PF Ceramic		C ₃₀₄	150PF (built in IFT _{A-1})
-319-11	C ₁₀₄	70PF "	1-101-072-15	C ₃₀₅	0.01 μ F Ceramic
-128-11	C ₁₀₅	15PF "		C ₃₀₆	15PF (built in IFT _{F-2})
-028-11	C ₁₀₆	50PF "	1-101-093-11	C ₃₀₇	6PF Ceramic
-216-11	C ₁₀₇	5PF "	1-121-104-00	C ₃₀₈	10 μ F 6V Electrolytic
-125-15	C ₁₀₈	0.001 μ F "	1-101-010-11	C ₃₀₉	2PF Ceramic
-530-11	C ₁₀₉	22PF "	1-105-833-12	C ₃₁₀	0.01 μ F Mylar
-072-15	C ₁₁₀	0.01 μ F "		C ₃₁₁	150PF (built in IFT _{A-2})
-125-15	C ₁₁₁	0.001 μ F "		C ₃₁₂	50PF (" IFT _{F-3})
-125-15	C ₁₁₂	0.001 μ F "		C ₃₁₃	15PF (" ")
-048-11	C ₁₁₃	4PF "		C ₃₁₄	50PF (" IFT _{A-2})
	C ₁₁₄	50PF (built in IFT _{F-1})	1-101-011-11	C ₃₁₅	3PF Ceramic
1-101-125-15	C ₁₁₅	0.001 μ F Ceramic	-072-15	C ₃₁₆	0.01 μ F "
-120-11	C ₁₁₆	30PF "	1-105-831-12	C ₃₁₇	0.0068 μ F Mylar
-011-11	C ₁₁₇	3PF "		C ₃₁₈	50PF (built in IFT _{A-3})
-125-15	C ₁₁₈	0.001 μ F "	1-101-048-11	C ₃₁₉	4PF Ceramic
-226-11	*C ₁₁₉	6PF "		C ₃₂₀	15PF (built in IFT _{F-4})
1-105-821-12	C ₁₂₀	0.001 μ F Mylar		C ₃₂₁	70PF (" ")
1-101-128-11	C ₁₂₁	15PF Ceramic	1-101-072-15	C ₃₂₂	0.01 μ F Ceramic
1-105-821-12	C ₁₂₂	0.001 μ F Mylar	-072-15	C ₃₂₃	0.01 μ F "
1-101-799-11	C ₁₂₃	2000PF Feed Through Capacitor		C ₃₂₄	—deleted—
-799-11	C ₁₂₄	2000PF "	1-103-008-12	C ₃₂₅	100PF Styrol
-799-11	C ₁₂₅	2000PF "		C ₃₂₆	—deleted—
1-151-079-11	C ₂₀₁	AM, Tuning Capacitor, 2 gang	1-121-103-00	C ₃₂₇	10 μ F 3V Electrolytic
	C ₂₀₂	"	1-127-044-11	C ₃₂₈	0.047 μ F " (Alox)
1-141-011-00	C ₂₀₃	Trimmer Capacitor, 2 unit	1-121-103-00	C ₃₂₉	10 μ F 3V "
	C ₂₀₄	"	1-105-837-12	C ₃₈₀	0.022 μ F Mylar
1-101-645-11	C ₂₀₅	10PF Ceramic	-355-12	C ₃₈₁	0.047 μ F "
1-105-351-12	C ₂₀₆	0.01 μ F Mylar		C ₃₈₂	—deleted—
-833-12	C ₂₀₇	0.01 μ F "	1-103-010-12	C ₃₈₃	200PF Styrol
-351-12	C ₂₀₈	0.01 μ F "	-010-12	C ₃₈₄	200PF "
-356-12	C ₂₀₉	0.068 μ F "	1-101-157-11	C ₃₈₅	1PF Ceramic
1-103-090-11	C ₂₁₀	400PF Styrol	1-121-104-00	C ₄₀₁	10 μ F 6V Electrolytic
1-101-859-11	C ₂₁₁	22PF Ceramic	-115-00	C ₄₀₂	100 μ F 6V "
1-121-221-11	C ₂₁₂	60 μ F 10 V Electrolytic	-135-00	C ₄₀₃	50 μ F 6V "
1-105-351-12	C ₂₁₃	0.01 μ F Mylar	1-105-825-12	C ₄₀₄	0.0022 μ F Mylar
-351-12	C ₂₁₄	0.01 μ F "	1-121-104-00	C ₄₀₅	10 μ F 6V Electrolytic
-351-12	C ₂₁₅	0.01 μ F "	-206-11	C ₄₀₆	0.2 μ F 15V "
-821-12	C ₂₁₆	0.001 μ F "	-135-00	C ₄₀₇	50 μ F 6V "
1-121-061-00	C ₂₁₇	200 μ F 6 V Electrolytic	-115-00	C ₄₀₈	100 μ F 6V "
1-101-072-15	C ₃₀₁	0.01 μ F Ceramic	1-105-359-12	C ₄₀₉	0.22 μ F Mylar
1-105-829-12	C ₃₀₂	0.0047 μ F Mylar	1-121-115-00	C ₄₁₀	100 μ F 6V Electrolytic
	C ₃₀₃	50PF (built in IFT _{F-2})	1-127-018-11	C ₄₁₁	0.047 μ F " (Alox)

* To be adjusted

Audio Transformer

T₄₀₁ Driver Transformer


	Impedance	DC Resistance
Primary	820 Ω	within 115 Ω
Secondary	1.8 K Ω (C•T)	within 190 Ω

T₄₀₂ Output Transformer

	Impedance	DC Resistance
Primary	68 Ω (C•T)	within 5.7 Ω
Secondary	8 Ω	within 0.9 Ω


Exploded Diagram


(1)

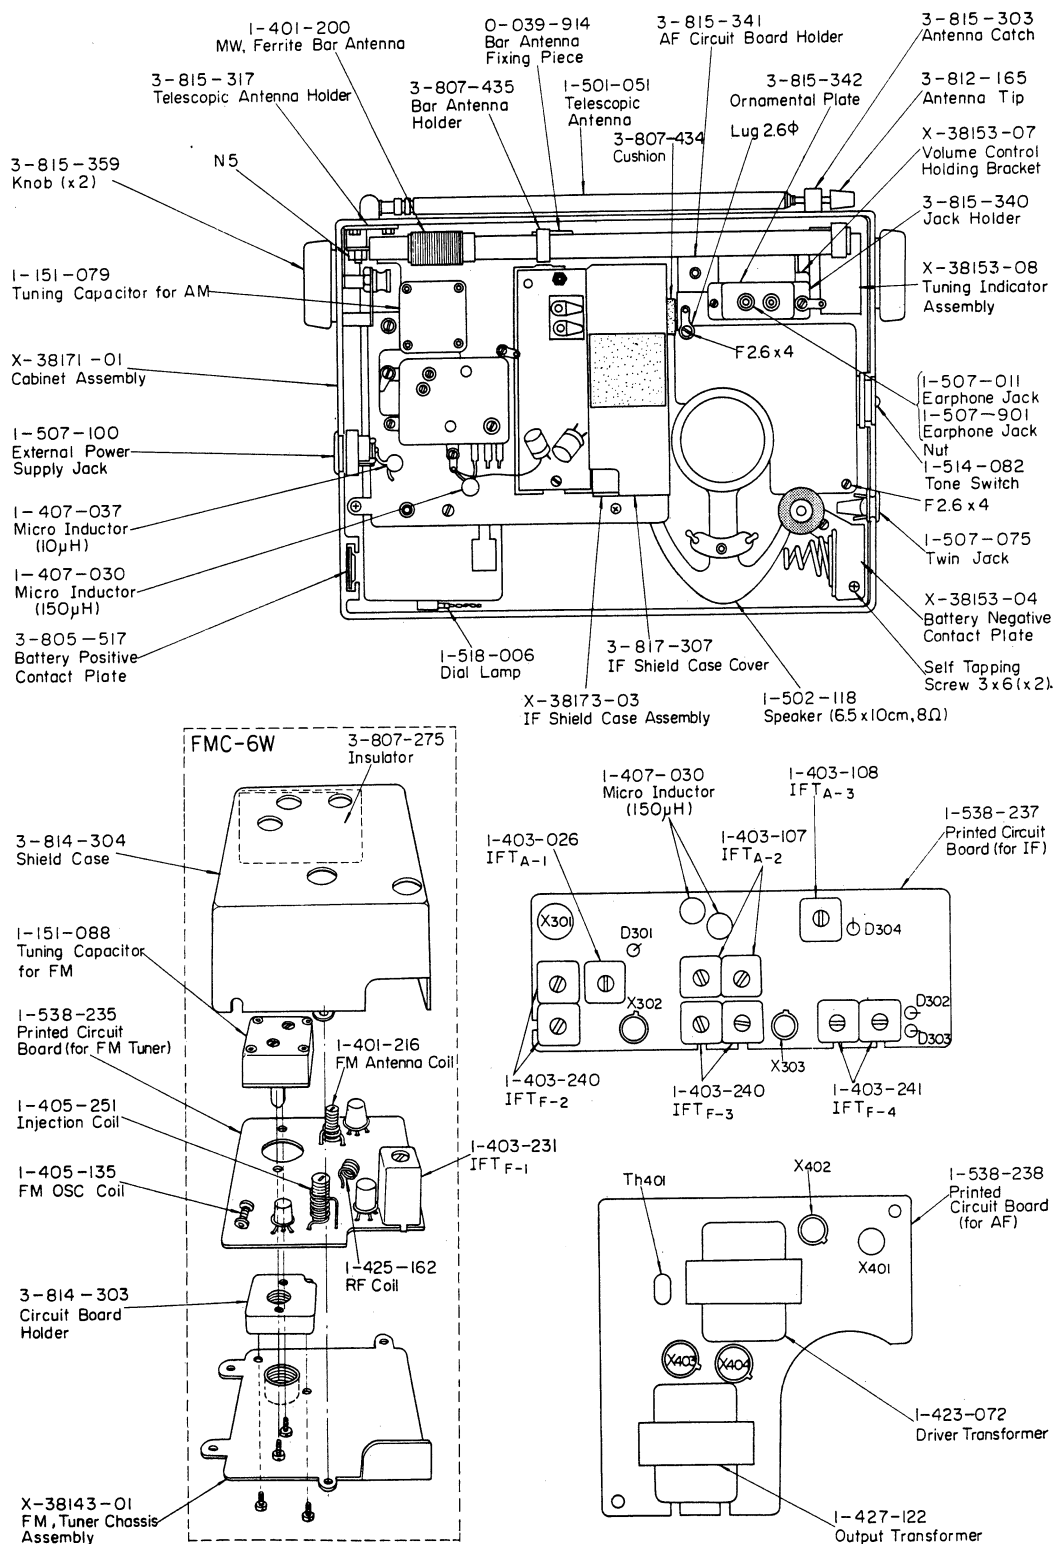

Exploded Diagram

(2)

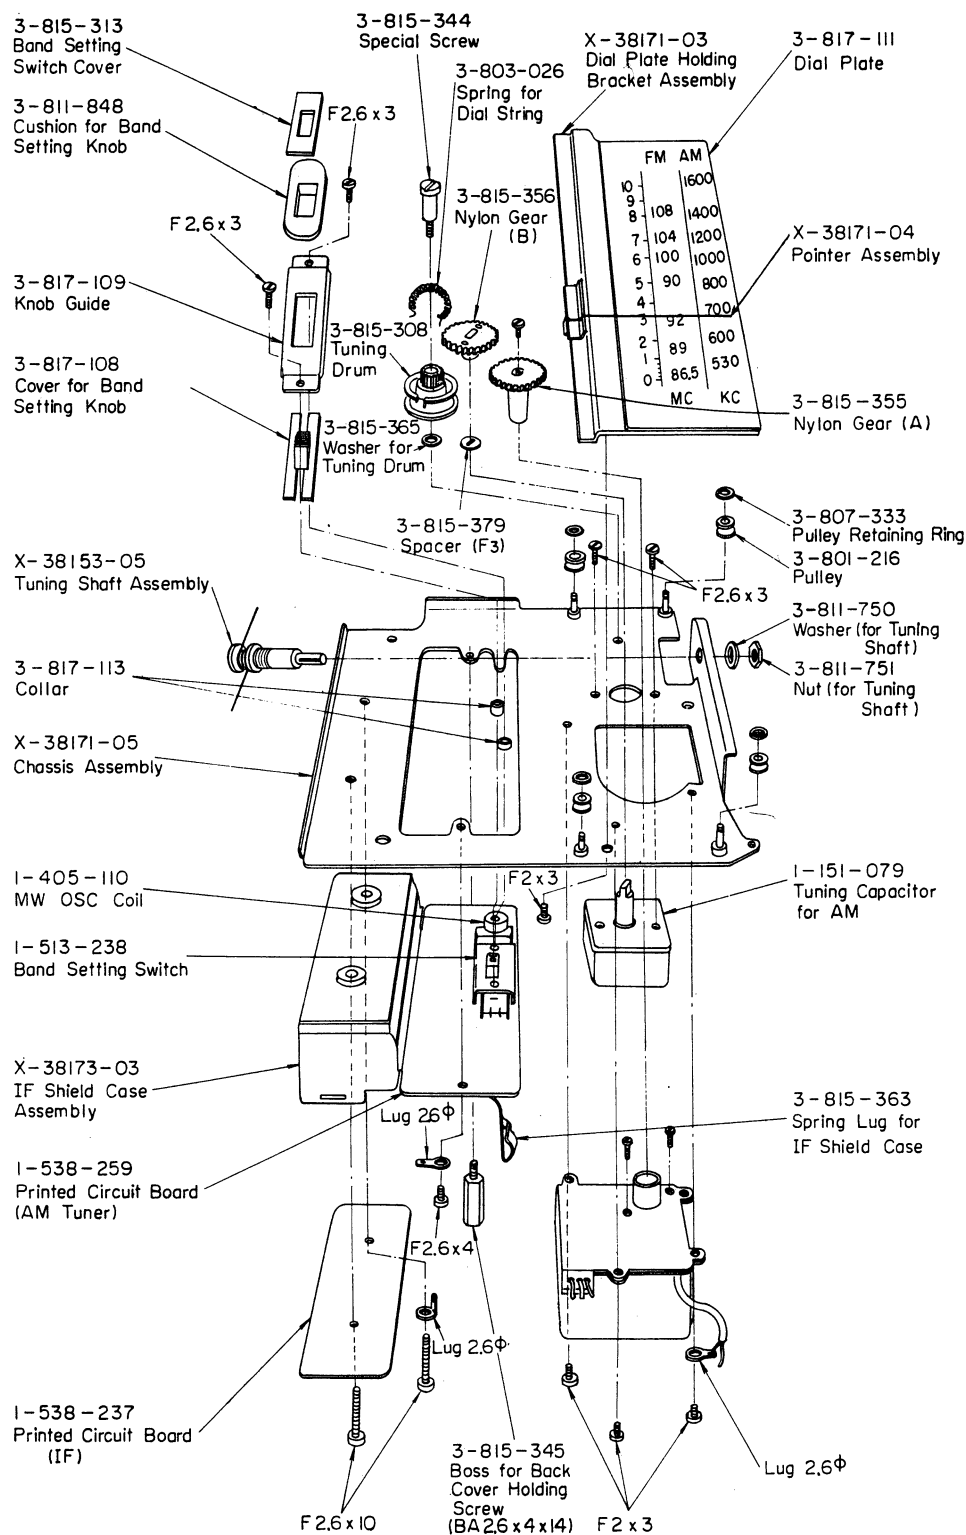


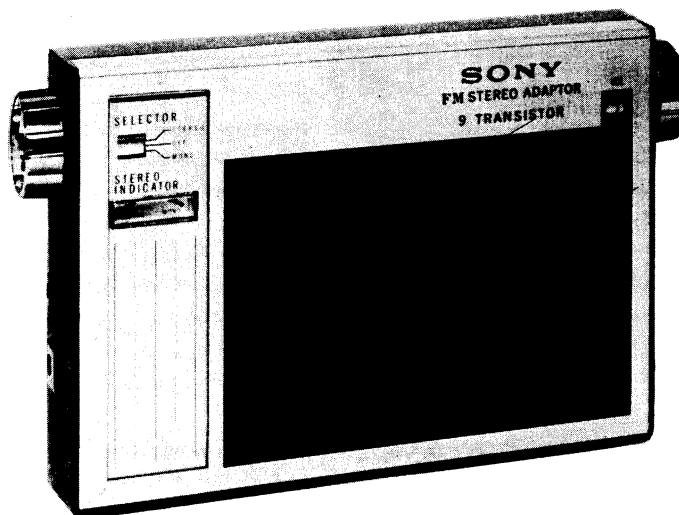

Specifications

Useful Range :	-30~-50 dBm (Pilot Level)			
Channel Separation :	More than 30 dB (at -35 dBm pilot input)			
Distortion Factor :	1% (at 50 mW output with Modulation Frequency of 1 Kc)			
Fidelity :	Frequency	100 c/s	1 Kc	10 Kc
	Tone H	-5 dB	0 dB	-15 dB
	Tone L	-5 dB	0 dB	-25 dB
Output Power :	300 mW (undistorted)			
	500 mW (maximum)			
Current Drain :	17 mA at zero signal; 170 mA at 300 mW output			
Speaker :	4" X 2-1/2" (10 X 6.5 cm) PM dynamic, 8 Ω			
Power Source :	Three Size "C" Flashlight Batteries (4.5 Volts in total)			
Dimensions :	7-1/8" X 5-3/16" X 1-7/8" (180 X 131 X 47.5 mm)			
Weight :	1-5/8 lbs. (0.75 kg)			
Color :	Gray, Beige			

Block Diagram

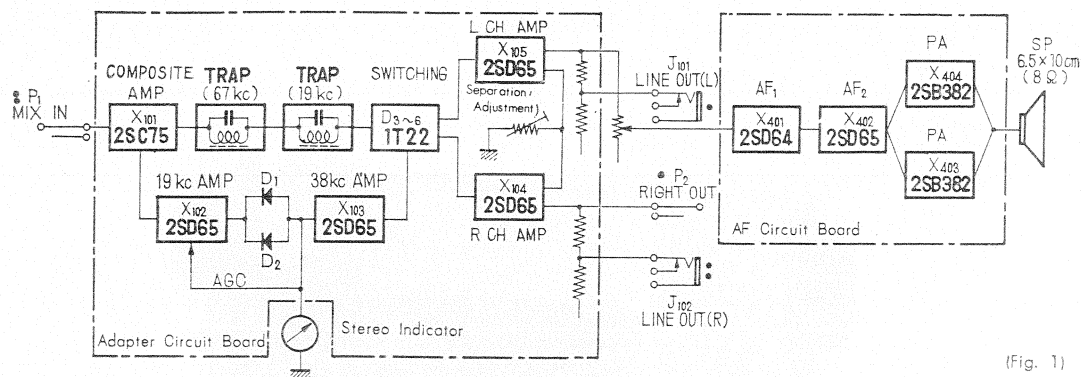


(Fig. 1)

Removal of Chassis

- (1) Remove the two Back Cover Holding Screws ($\oplus$ RK 2.6X10) and open the Back Cover.
- (2) Take out all the Batteries.
- (3) Remove the Battery Cylinder by unscrewing the two screws.
- (4) Remove the Mode Selector Knob and the Volume Control Knob by pulling straight out.
- (5) Remove the Earphone Jack, the Tone Switch, the Twin Jack and the External Power Supply Jack by pulling straight out.
- (6) Remove the four Chassis Holding Screws marked with $\blacktriangle$ in Fig. 2.
- (7) Take out the Chassis from the Cabinet gently.

Removal of Adapter Circuit Board

- (1) Remove the two Back Cover Holding Screws and open the Back Cover.
- (2) Remove the four Adapter Circuit Board Holding Screws marked with $\triangle$ in Fig. 2.
- (3) Remove the Adapter Circuit Board from the Chassis taking care not to cut the leads.

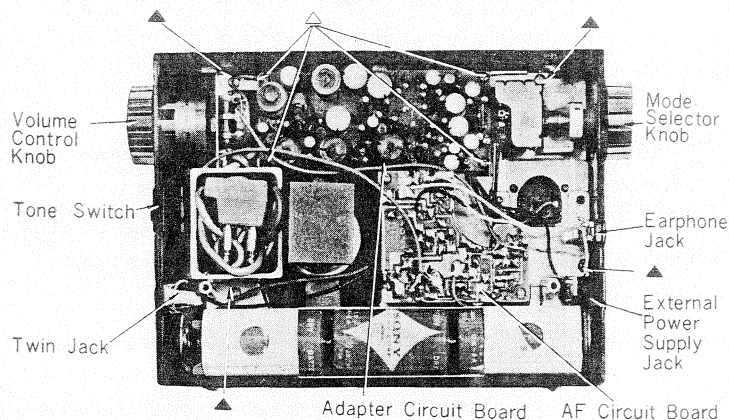

(Fig. 2)

ADJUSTMENT PROCEDURE


Adjustment for balance of X_{104} and X_{105}

- (1) Connect a VTVM to the junction of C_{126} — R_{142} (C_{127} — R_{143}) and ground.
- (2) Set the Mode Selector Switch to "MONO".
- (3) Unsolder the lead (gray) at the Volume Control coming from the Adapter Circuit Board.
- (4) Feed a 1Kc signal of -25 dBs from the Audio Oscillator into the MPX IN (P_1).
- (5) Turn the Core of the Adjustable Resistor (R_{139}) counter-clockwise to the full.
- (6) Read the VTVM connected by preceding step (1) and compare the output level of CH-1 (LEFT) with that of CH-2 (RIGHT). If the output level of CH-1 (CH-2) is higher than that of CH-2 (CH-1), increase the resistance value for the Resistor R_{137} (R_{138}) so that the output level of CH-1 (CH-2) becomes the same as that of CH-2 (CH-1).

* Approximately 10 Ω resistor may be suitable for 0.5 dB difference in output level.

Adjustment for Adapter Circuit Board

A. Trap Coil Adjustment (Refer to Fig. 6 and Fig. 7)

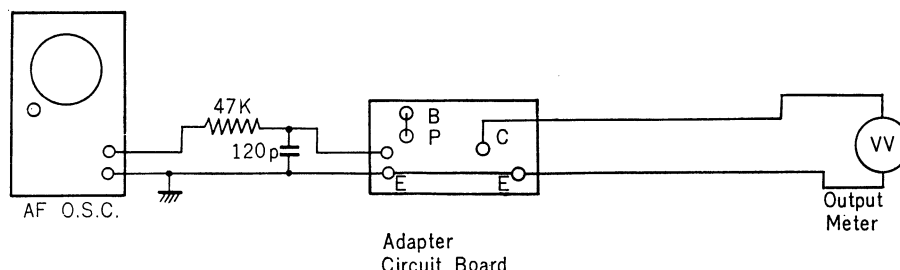

(Fig. 3)

- (1) Connect an Audio Oscillator to the input terminal of the Adapter Circuit Board through the Dummy Load for Tuner as shown in Fig. 3.
- (2) Bridge between "B" and "P" (shown in Fig. 7) by soldering.
- (3) Deliver a 19 Kc signal from the Audio Oscillator.
- (4) Connect a VTVM to the input terminal "I" (shown in Fig. 7) and ground on the Adapter Circuit Board.
- (5) Adjust the Level Control Knob of the Audio Oscillator so that the VTVM indicates -10~-20 dBm.
- (6) Remove the VTVM connected by preceding step (4) connect it to point "C" (shown in Fig. 7) and ground on the Adapter Circuit Board.
- (7) Adjust the 19 Kc Trap Coil to obtain the minimum reading on the VTVM.
- (8) Deliver a 67 Kc signal from the Audio Oscillator.
- (9) Adjust the 67 Kc Trap Coil to obtain the minimum reading on the VTVM.
- (10) Unsolder the bridged portion between "B" and "P" with a soldering iron.


B. Channel Separation Adjustment

Preparation

- (1) Connect the Audio Oscillator to the left channel terminal of the Stereo Generator.
- (2) Connect the output terminal of the Stereo Generator to the input terminal "I" (shown in Fig. 7) of the Adapter Circuit Board through the Dummy Load for Tuner as shown in Fig. 4.
- (3) Connect the VTVM to the input terminal of the Adapter Circuit Board as shown in Fig. 4.
- (4) Deliver a 1 Kc signal from the Audio Oscillator.
- (5) Deliver only pilot signal (19 Kc) from the Stereo Generator.

- (6) Adjust the Level Control Knob of the Stereo Generator so that the VTVM indicates -45 dBm.
- (7) Turn off the pilot signal and deliver main channel signal from the Stereo Generator.
- (8) Adjust the output level of the Audio Oscillator so that the main channel signal becomes -41 dBm.

Note: When it is impossible to obtain the Main Channel only, set the output level of the composite signal (main channel signal + sub channel signal) to -35 dBm.

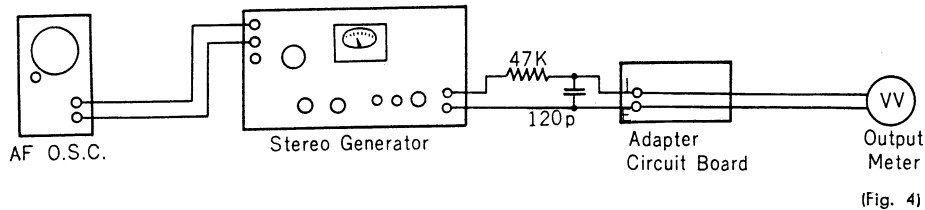


1. Sub-Carrier Adjustment


Switch Setting :

- a) Pilot Switch ON
 - b) Main & Sub Channel Switch OFF
- (1) Connect the VTVM to the point "S" (shown in Fig. 7) and ground on the Adapter Circuit Board.
 - (2) Adjust the cores of the 19 Kc Pick-up Coil, the 19 Kc Doubler Transformer and the 38 Kc Switching Transformer to obtain the maximum output. (Output of 38 Kc sine wave will be approximately $+5$ dBm.)
 - (3) Turn the core of the 19 kc Pick-up Transformer clockwise so that the VTVM indicates 2 dB below the maximum output.
 - (4) Turn the core of the 19 Kc Doubler Transformer counter-clockwise so that the VTVM indicates 2 dB below the output obtained by the preceding step (4).


2. Channel Separation Adjustment

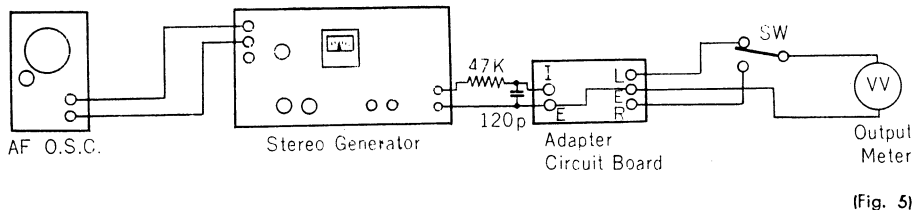

- (1) Connect the VTVM to point "R" and point "L" (shown in Fig. 7) on the Adapter Circuit Board through Channel Selector Switch as shown in Fig. 5.
- (2) Connect the Stereo Generator to the input terminal "I" (shown in Fig. 7) and ground on the Adapter Circuit Board through the Dummy Load for Tuner as shown in Fig. 5.
- (3) Set the Separation Control (R_{139}) on the Adapter Circuit Board to the extreme counter-clockwise position.
- (4) Deliver the sub channel signal and pilot signal from the Stereo Generator, in other words, set Main Channel Switch to the "OFF" position.
- (5) Adjust the core of the 38 Kc Switching Transformer to obtain the maximum output. In this adjustment, the Channel Selector Switch (SW) may be set either Left or Right.
Output level at "L" or "R" terminal on the Adapter Circuit Board will be approximately -41 dBm.
- (6) Set the Main Channel Switch of the Stereo Generator to the "ON" position and set the Channel Selector Switch (SW) to the "R" position.
- (7) Adjust the Separation Control (R_{139}) to obtain the minimum reading on the VTVM.

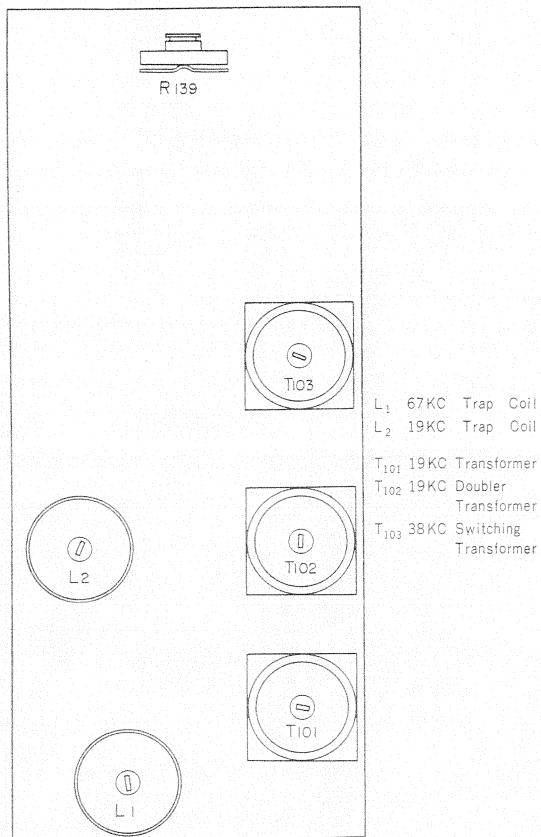


(Fig. 6)

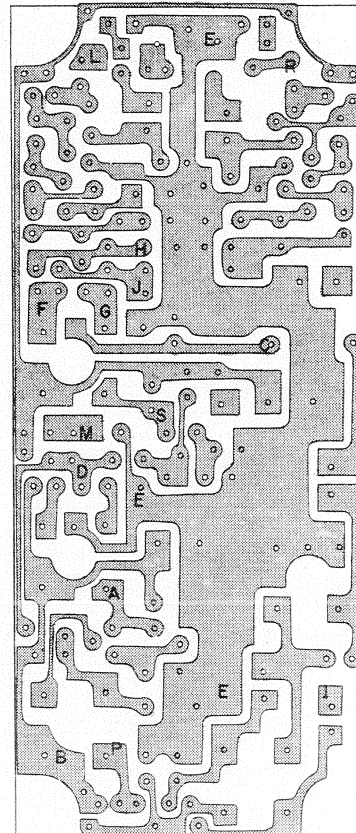


(Fig. 7)

Schematic Diagram

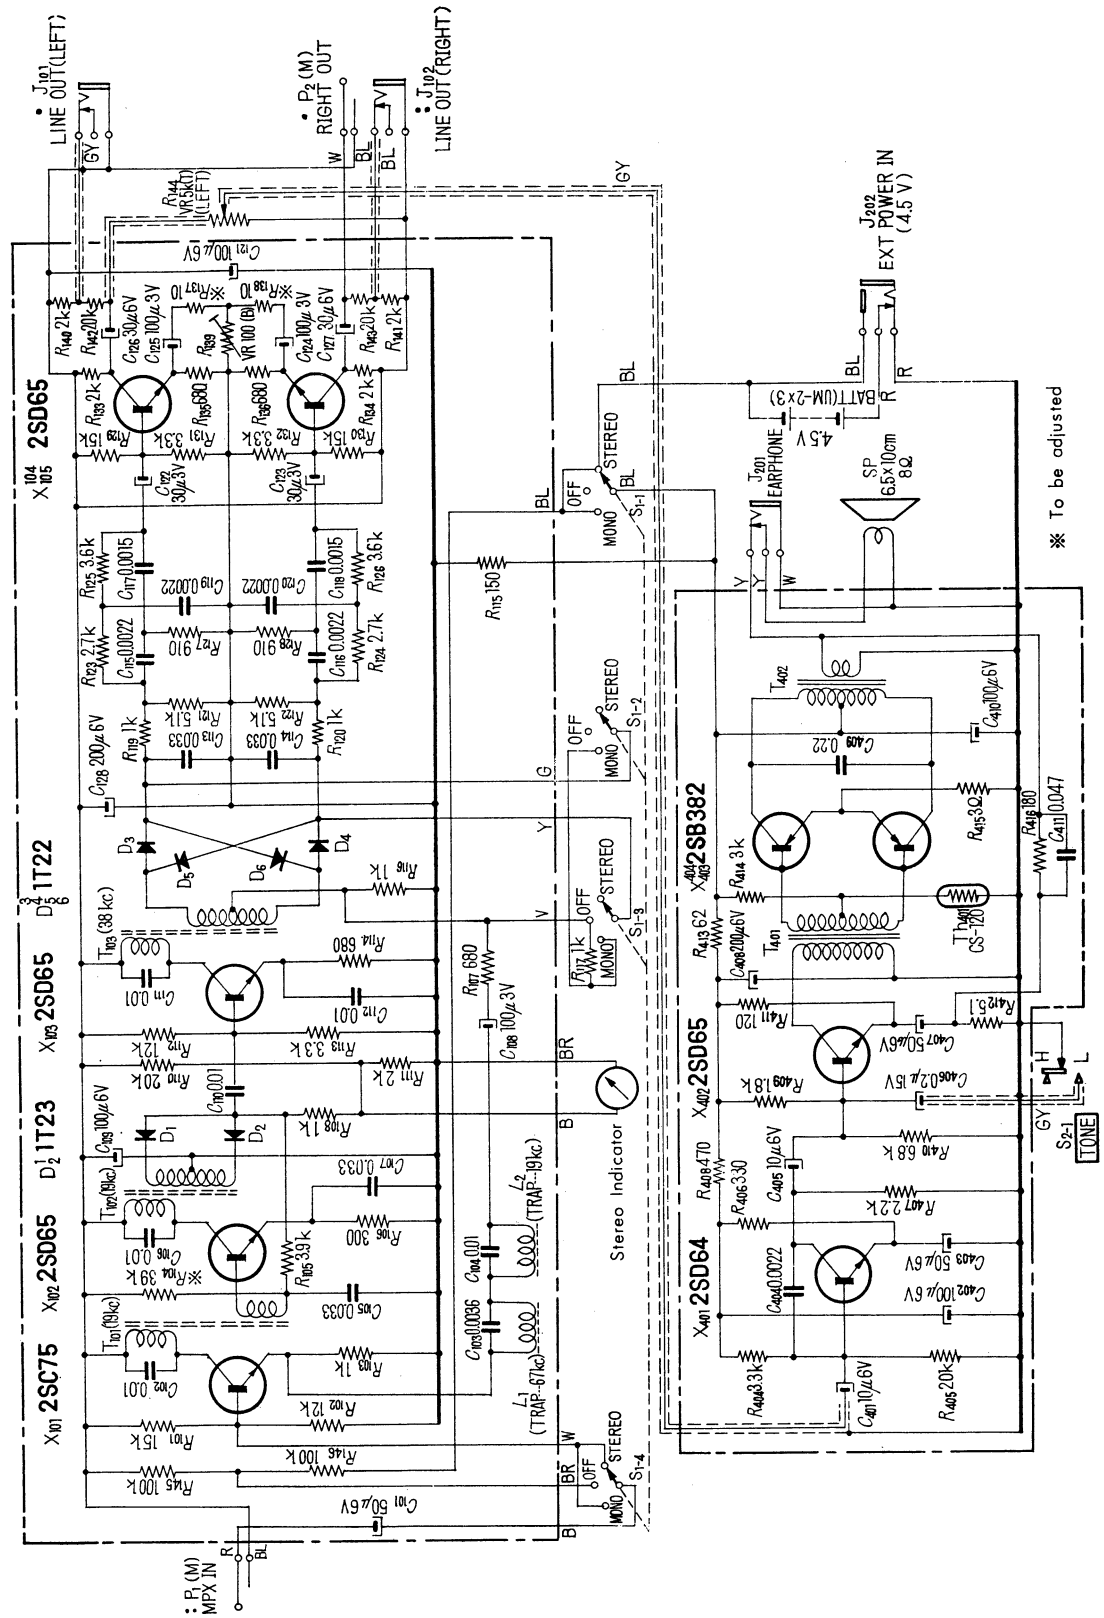


Voltage and Current Distribution Chart at Zero Signal

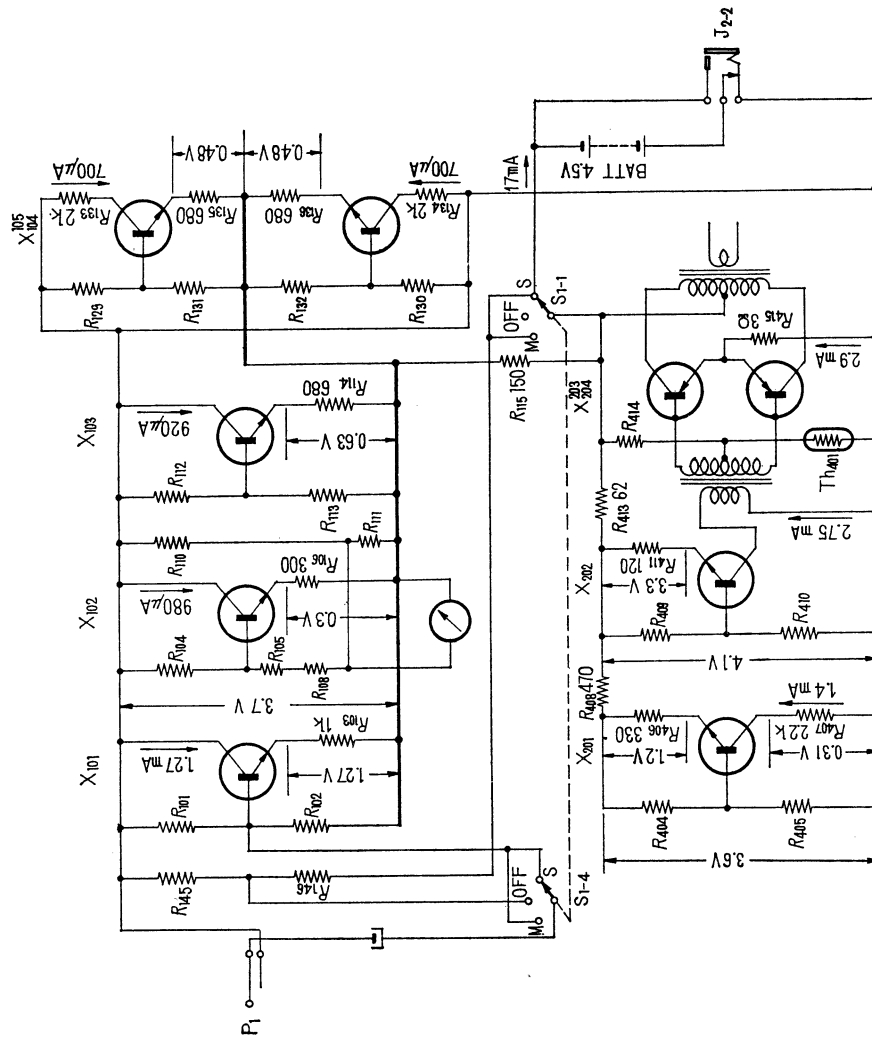


Mounting Diagram

—Printed Side—
AF Section

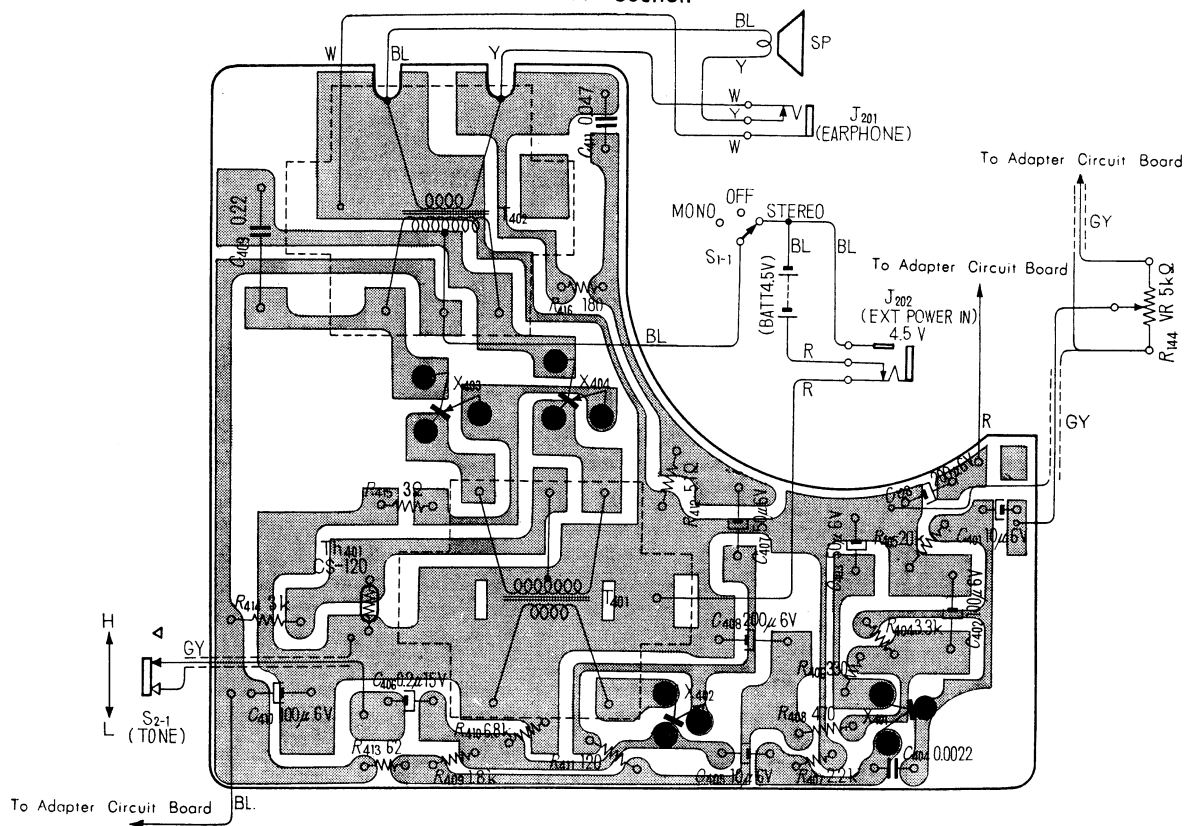


—Parts Side—
AF Section

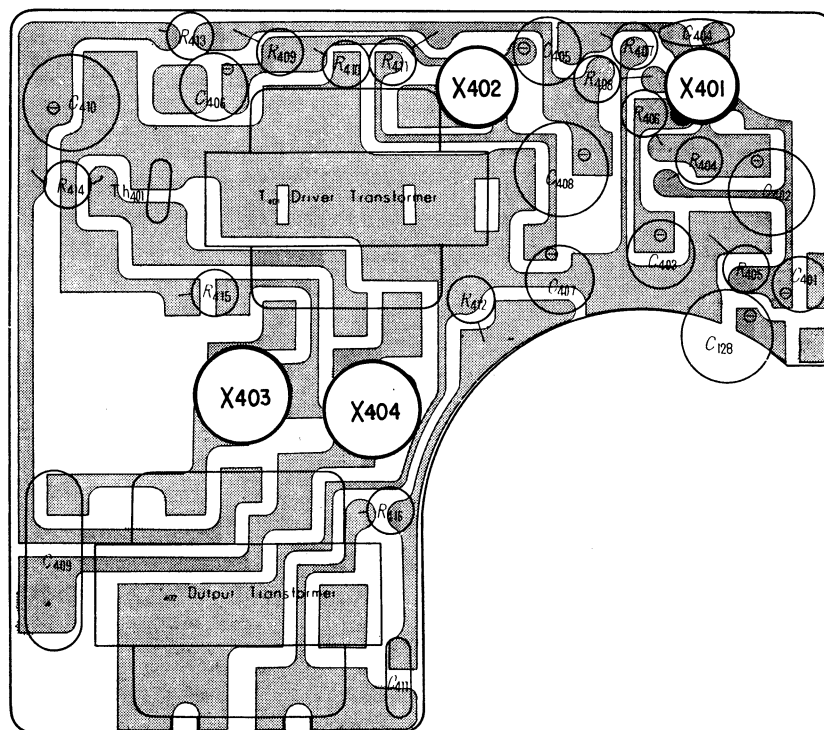

Mounting Diagram


-Printed Side-

Adapter Section

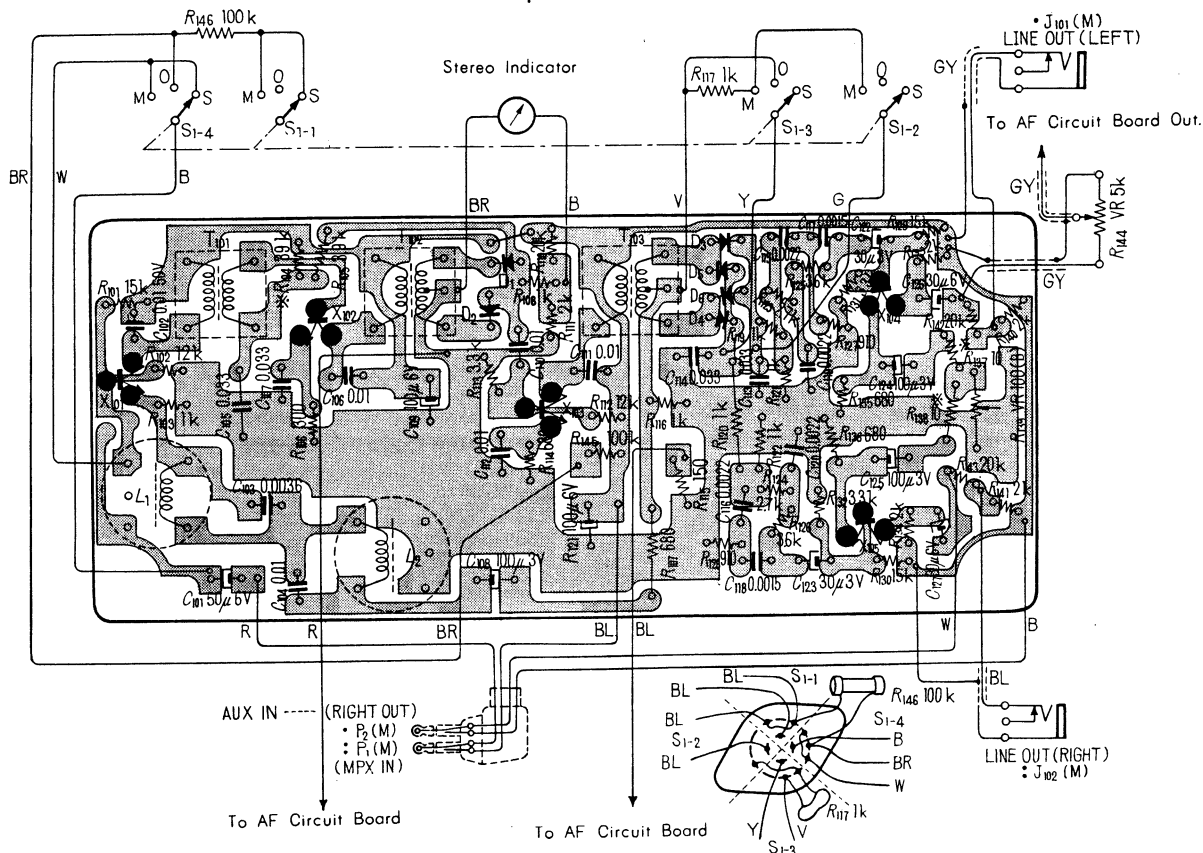

— Parts Side —

Adapter Section

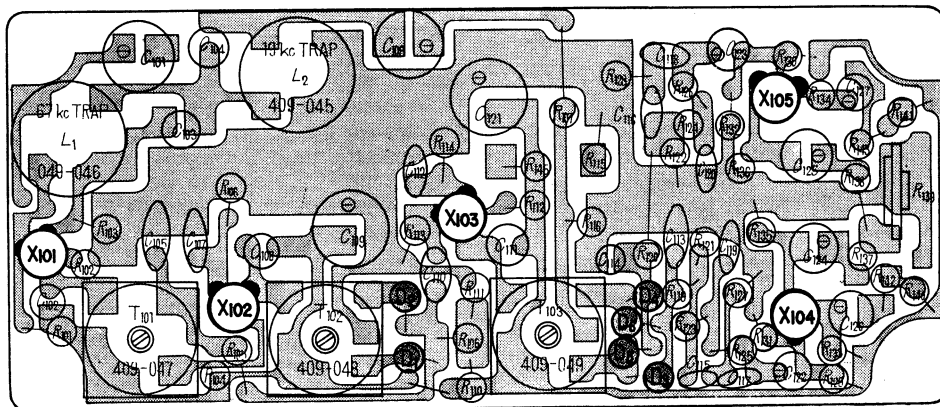

Electronic Parts List

Part No.	Symbol No.	Description	Part No.	Symbol No.	Description
	X ₁₀₁	Transistor 2SC75	1-203-623-00	R ₁₂₈	910 Ω 1/16W Carbon
	X ₁₀₂	// 2SD65	-629-00	R ₁₂₉	15K Ω //
	X ₁₀₃	// 2SD65	-629-00	R ₁₃₀	15K Ω //
	X ₁₀₄	// 2SD65	-434-00	R ₁₃₁	3.3K Ω //
	X ₁₀₅	// 2SD65	-434-00	R ₁₃₂	3.3K Ω //
	X ₄₀₁	// 2SD64	-446-00	R ₁₃₃	2K Ω //
	X ₄₀₂	// 2SD65	-446-00	R ₁₃₄	2K Ω //
	X ₄₀₃	// 2SB382	-610-00	R ₁₃₅	680 Ω //
	X ₄₀₄	// 2SB382	-610-00	R ₁₃₆	680 Ω //
			-435-00	*R ₁₃₇	15 Ω //
	D ₁	Diode 1T23	-435-00	*R ₁₃₈	15 Ω //
	D ₂	// 1T23	1-221-469-11	R ₁₃₉	100 Ω Adjustable Resistor
	D ₃	// 1T22	1-203-446-00	R ₁₄₀	2K Ω 1/16W Carbon
	D ₄	// 1T22	-446-00	R ₁₄₁	2K Ω //
	D ₅	// 1T22	-631-00	R ₁₄₂	20K Ω //
	D ₆	// 1T22	-631-00	R ₁₄₃	20K Ω //
	Th ₄₀₁	Thermistor CS-120	1-221-539-11	R ₁₄₄	5K Ω Volume Control
1-520-039-11	M	Stereo Indicator	1-203-614-00	R ₁₄₅	100K Ω 1/16W Carbon
1-513-233-11	S ₁₀₁₋₁₀₄	Mode Selector Switch	-480-00	R ₁₄₆	100K Ω //
1-514-082-11	S ₂₋₁	Tone Switch	-434-00	R ₄₀₁	3.3K Ω //
1-507-075-11	J ₁₀₁	Twin Jack (Line Output)	-631-00	R ₄₀₂	20K Ω //
	J ₁₀₂	// (//)	-604-00	R ₄₀₃	330 Ω //
-050-01	J ₂₀₁	Earphone Jack	-423-00	R ₄₀₄	2.2K Ω //
-100-11	J ₂₀₂	External Power Supply Jack	-438-00	R ₄₀₅	6.8K Ω //
	P ₁	Cord with Twin Plug	-339-00	R ₄₀₆	1.8K Ω //
1-534-210-11	P ₂	//	-596-00	R ₄₀₇	120 Ω //
1-502-118-11	SP	Speaker	-450-00	R ₄₀₈	5.1 Ω //
1-409-047-11	T ₁₀₁	Pick-up Transformer	-420-00	R ₄₀₉	470 Ω //
-048-11	T ₁₀₂	Doubler Transformer	1-204-189-00	R ₄₁₀	62 Ω //
-049-11	T ₁₀₃	Switching Transformer	1-203-489-00	R ₄₁₁	3K Ω //
-046-11	L ₁	Trap Coil (67 Kc)		R ₄₁₂	(Built in Thermistor)
-045-11	L ₂	// (19 Kc)	1-203-704-00	R ₄₁₃	3 Ω 1/8W Carbon
1-423-072-11	T ₄₀₁	Driver Transformer	-417-00	R ₄₁₄	180 Ω 1/16W //
1-427-122-11	T ₄₀₂	Output Transformer			Capacitor
1-528-002-00	Batt.	Battery (4.5 V in total)	1-121-135-00	C ₁₀₁	50 μF 6V Electrolytic
		Resistor	1-129-202-11	C ₁₀₂	0.01 μF PC
1-203-629-00	R ₁₀₁	15K Ω 1/16W Carbon	1-103-369-12	C ₁₀₃	0.0036 μF Styrol
-439-00	R ₁₀₂	12K Ω //	1-129-202-11	C ₁₀₄	0.01 μF PC
-421-00	R ₁₀₃	1K Ω //	1-105-679-12	C ₁₀₅	0.033 μF Mylar
-635-00	*R ₁₀₄	39K Ω //	1-129-202-11	C ₁₀₆	0.01 μF PC
-878-00	R ₁₀₅	3.9K Ω //	1-105-679-12	C ₁₀₇	0.033 μF Mylar
-603-00	R ₁₀₆	300 Ω //	1-121-111-00	C ₁₀₈	100 μF 3V Electrolytic
-610-00	R ₁₀₇	680 Ω //	-115-00	C ₁₀₉	100 μF 6V //
-421-00	R ₁₀₈	1K Ω //	1-105-673-12	C ₁₁₀	0.01 μF Mylar
	R ₁₀₉	---deleted---	1-129-202-11	C ₁₁₁	0.01 μF PC
1-203-631-00	R ₁₁₀	20K Ω 1/16W Carbon	1-105-673-12	C ₁₁₂	0.01 μF Mylar
-446-00	R ₁₁₁	2K Ω //	-679-12	C ₁₁₃	0.033 μF //
-439-00	R ₁₁₂	12K Ω //	-679-12	C ₁₁₄	0.033 μF //
-434-00	R ₁₁₃	3.3K Ω //	-665-12	C ₁₁₅	0.0022 μF //
-610-00	R ₁₁₄	680 Ω //	-665-12	C ₁₁₆	0.0022 μF //
1-204-598-00	R ₁₁₅	150 Ω //	-663-12	C ₁₁₇	0.0015 μF //
1-203-421-00	R ₁₁₆	1K Ω //	-665-12	C ₁₁₈	0.0015 μF //
-182-00	R ₁₁₇	1K Ω //	-665-12	C ₁₁₉	0.0022 μF //
	R ₁₁₈	---deleted---	-665-12	C ₁₂₀	0.0022 μF //
1-203-421-00	R ₁₁₉	1K Ω 1/16W Carbon	1-121-115-00	C ₁₂₁	100 μF 6V Electrolytic
-421-00	R ₁₂₀	1K Ω //	-113-00	C ₁₂₂	30 μF 3V //
-448-00	R ₁₂₁	5.1K Ω //	-113-00	C ₁₂₃	30 μF 3V //
-448-00	R ₁₂₂	5.1K Ω //	-111-00	C ₁₂₄	100 μF 3V //
-447-00	R ₁₂₃	2.7K Ω //	-111-00	C ₁₂₅	100 μF 3V //
-447-00	R ₁₂₄	2.7K Ω //	-102-00	C ₁₂₆	30 μF 6V //
-490-00	R ₁₂₅	3.6K Ω //	-102-00	C ₁₂₇	30 μF 6V //
-490-00	R ₁₂₆	3.6K Ω //	-123-00	C ₁₂₈	200 μF 6V //
-623-00	R ₁₂₇	910 Ω //	-104-00	C ₄₀₁	10 μF 6V //
			1-105-825-12	C ₄₀₂	0.0022 μF Mylar


* To be adjusted

—continued—

Part No.	Symbol No.	Description	Part No.	Symbol No.	Description
1-121-135-00	C ₄₀₃	50 μ F 6V Electrolytic	1-105-395-12	C ₄₀₈	0.22 μ F Mylar
-104-00	C ₄₀₄	10 μ F 6V "	1-121-115-00	C ₄₀₉	100 μ F 6V Electrolytic
-206-00	C ₄₀₅	0.2 μ F 15V "	1-127-018-11	C ₄₁₀	0.047 μ F "
-135-00	C ₄₀₆	50 μ F 6V "	1-121-115-00	C ₄₁₁	100 μ F 6V "
-115-00	C ₄₀₇	100 μ F 6V "			


Exploded Diagram

(1)

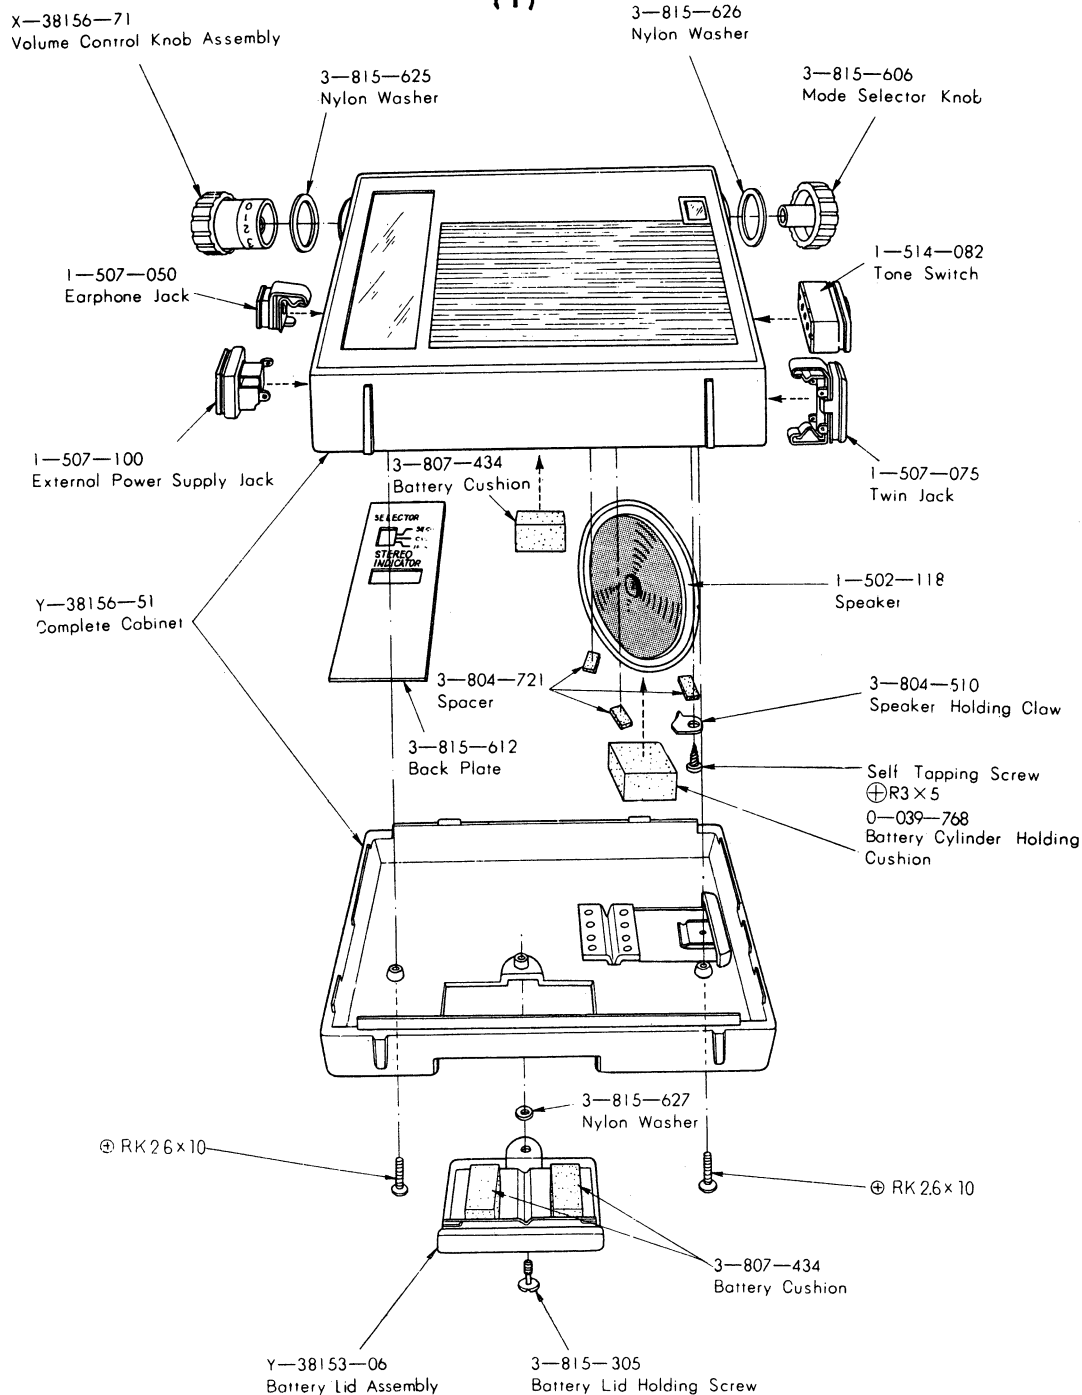

Exploded Diagram

(2)

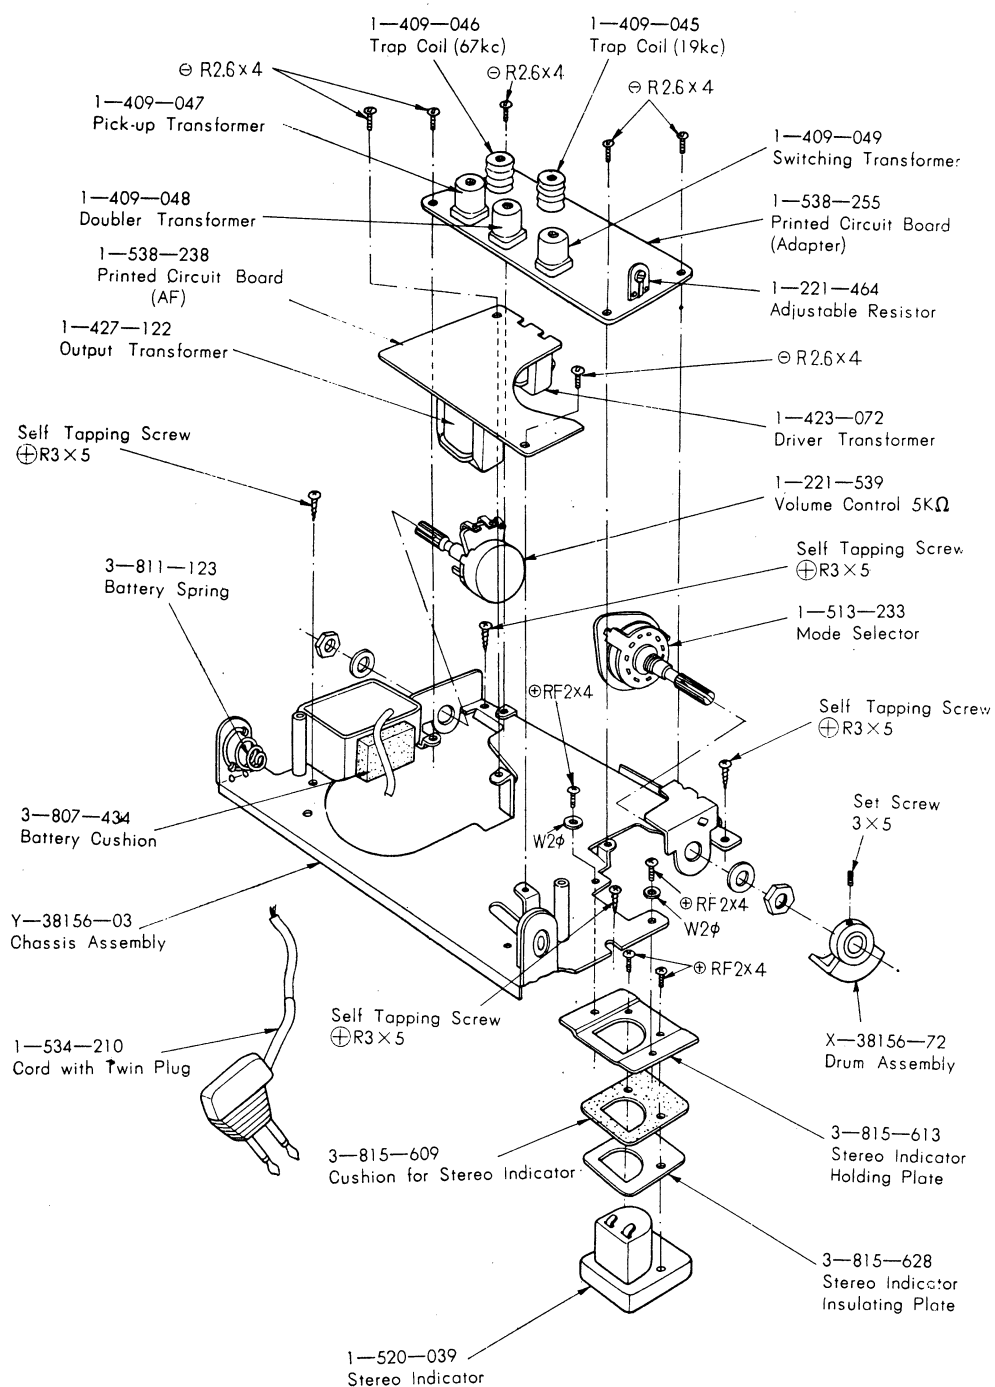

Sony Corporation

© 1965

9-950-071-01

— 28 —

77J0603-3
Printed in Japan